



Register your new Bosch now:
www.bosch-home.com/welcome



BOSCH

**Extractor hood
DUL62FA21, DUL62FA51**

[en] User manual 3

en Table of contents

Important safety information	3
Environmental protection	5
Saving energy.....	5
Environmentally friendly disposal.....	5
Operating modes	5
Air extraction mode.....	5
Air recirculation mode.....	5
Operating the appliance	6
Setting the fan.....	6
Lighting.....	6
Cleaning and maintenance	6

What to do in the event of a fault	8
Fault table.....	8
Customer service	8
Accessories	9

Additional information on products, accessories, spare parts and services can be found online at www.bosch-home.com and in the online shop at www.bosch-eshop.com

For product information or advice on application and operation, please contact our **Bosch Infoteam** on **Tel.: 089 69 339 339** (Mon-Fri, 8 a.m. to 6 p.m.). Only available in Germany.

Important safety information

Read these instructions carefully. Only then will you be able to operate your appliance safely and correctly. Retain the user manual and installation instructions for future use or for subsequent owners.

The appliance can only be used safely if it is correctly installed according to the installation instructions. The installer is responsible for ensuring that the appliance works perfectly at its installation location.

This appliance is intended for domestic use and the household environment only. The appliance is not intended for use outside. Do not leave the appliance unattended during operation. The manufacturer is not liable for damage which is caused by improper use or incorrect operation.

This appliance is intended for use up to a maximum height of 2000 metres above sea level.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Do not let children play with the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 at a safe distance from the appliance and power cable.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.

This appliance is not intended for operation with an external clock timer or a remote control.

 
Danger of suffocation!

Packaging material is dangerous to children. Never allow children to play with packaging material.

Danger of death!

Risk of poisoning from flue gases that are drawn back in.

Always ensure adequate fresh air in the room if the appliance is being operated in air extraction mode at the same time as a non-room-sealed heat-producing appliance is being operated.

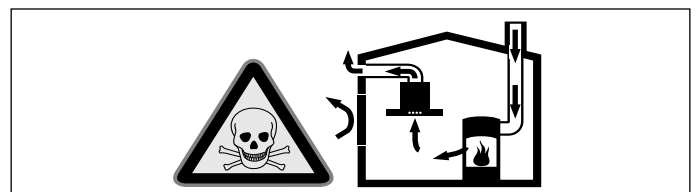


Non-room-sealed heating appliances (e.g. gas-, oil-, wood- or coal-burning heaters, continuous flow heaters or water heaters) draw in combustion air from the room in which they are installed and discharge the exhaust gases outdoors through an exhaust gas system (e.g. a chimney).

In combination with an activated extractor hood, room air is extracted from the kitchen and neighbouring rooms - a partial vacuum is produced if not enough fresh air is supplied. Toxic gases from the chimney or the extraction shaft are sucked back into the living space.

- Adequate incoming air must therefore always be ensured.
- An incoming/exhaust air wall box alone does not ensure compliance with the limit.

 Safe operation is possible only when the partial vacuum in the place where the heat-producing appliance is installed does not exceed 4 Pa (0.04 mbar). This can be achieved whenever the air needed for combustion is able to enter through openings that cannot be sealed, for example in doors, windows, in combination with incoming/exhaust air wall boxes or by other technical means.

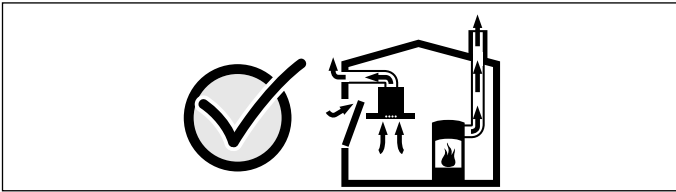

Always consult your responsible master chimney sweep. They are able to assess the house's entire ventilation setup and suggest suitable ventilation measures to you.

Unrestricted operation is possible if the extractor hood is operated exclusively in air recirculation mode.

Risk of fire!

- The grease deposits in the grease filter may catch fire.

Replace the grease filter at least every 2 months.

Never operate the appliance without a grease filter.

- The grease deposits in the grease filter may catch fire. Never work with naked flames close to the appliance (e.g. flambéing). Do not install the appliance near a heat-producing appliance for solid fuel (e.g. wood or coal) unless a closed, non-removable cover is present. There must be no flying sparks.

- Hot oil and fat ignites quickly. Never leave hot fat or oil unattended. Never use water to put out burning oil or fat. Switch off the hotplate. Extinguish flames carefully using a lid, fire blanket or something similar.
- When gas hotplates are in operation without any cookware placed on them, they can build up a lot of heat. A ventilation appliance installed above the cooker may become damaged or catch fire. Only operate the gas hotplates with cookware on them.
- Operating several gas hotplates at the same time produces a great deal of heat. A ventilation appliance installed above the cooker may become damaged or catch fire. Never operate two gas hotplates simultaneously on the highest flame for longer than 15 minutes. One large burner of more than 5 kW (wok) is equivalent to the power of two gas burners.

Risk of burns!

The accessible parts become very hot when in operation. Never touch these hot parts. Keep children at a safe distance.

Risk of injury!

- Components inside the appliance may have sharp edges. Wear protective gloves.
- Items placed on the appliance may fall off. Do not place any objects on the appliance.
- The light emitted by LED lights is very dazzling and can damage the eyes (risk group 1). Do not look directly into the switched on LED lights for longer than 100 seconds.

Risk of electric shock!

- A defective appliance may cause an electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the fuse in the fuse box. Call customer service.
- Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained customer service technicians. If the appliance is defective, unplug the appliance from the mains or switch off the fuse in the fuse box. Call customer service.
- Penetrating moisture may result in an electric shock. Do not use high-pressure cleaners or steam cleaners.

Causes of damage

Caution!

Risk of damage due to corrosion. Always switch on the appliance while cooking to avoid condensation. Condensate may cause corrosion damage.

Risk of damage due to ingress of moisture into the electronics. Never clean control elements with a wet cloth.

Surface damage due to incorrect cleaning. Always clean stainless steel surfaces in the direction of the grain. Do not use any stainless steel cleaners for the control elements.

Surface damage due to harsh or abrasive cleaning agents. Never use harsh or abrasive cleaning agents.

Risk of damaged caused by returning condensate. Install the air extraction duct in such a way that it falls away from the appliance slightly (1° slope).

Environmental protection

Your new appliance is particularly energy-efficient. Here you can find tips on how to save even more energy when using the appliance, and how to dispose of your appliance properly.

Saving energy

- During cooking, ensure that there is a sufficient supply of air to enable the extractor hood to work efficiently and with a low level of operating noise.
- Adjust the fan speed to the amount of cooking vapour produced during cooking. Only use intensive mode when required. The lower the fan speed, the less energy is consumed.
- If cooking produces large amounts of cooking vapours, select a higher fan speed in good time. If the cooking vapours have already spread around the kitchen, the extractor hood will need to be operated for longer.

- Switch off the extractor hood if you no longer require it.
- Switch off the lighting if you no longer require it.
- Clean and (if required) replace the filter at the specified intervals in order to increase the effectiveness of the ventilation system and to prevent the risk of fire.

Environmentally friendly disposal

Dispose of the packaging in an environmentally friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU on waste electrical and electronic equipment (WEEE).



This Directive provides an EU-wide framework for returning and recycling old appliances.

Operating modes

This appliance can be used in air extraction mode or air recirculation mode.

Air extraction mode



The air which is drawn in is cleaned by the grease filters and conveyed outdoors by a pipe system.

Note: The air must not be discharged into a flue that is used for exhaust fumes from appliances that burn gas or other fuels (not applicable to appliances that only discharge the air back into the room).

- Before conveying the exhaust air into a non-functioning smoke or exhaust gas flue, obtain the consent of the master chimney sweep responsible.
- If the exhaust air is conveyed through the outer wall, a telescopic wall box should be used.

Air recirculation mode



The air which is drawn in is cleaned by the grease filters and an activated charcoal filter, and is conveyed back into the kitchen.

Note: To bind odours in air recirculation mode, you must install an activated charcoal filter. The different options for operating the appliance in air recirculation mode can be found in the brochure. Alternatively, ask your specialist retailer. The required accessories are available from specialist retailers, from customer service or from the online shop. The accessory numbers can be found at the end of the user manual.

 
Operating the appliance

These instructions apply to several appliance variants. It is possible that individual features are described which do not apply to your appliance.

Note: Switch on the extractor hood when you start cooking and switch it off again several minutes after you have finished cooking. This is the most effective way of removing the kitchen fumes.

Note: Fold the glass cover forwards. This increases the extraction area.

Control panel

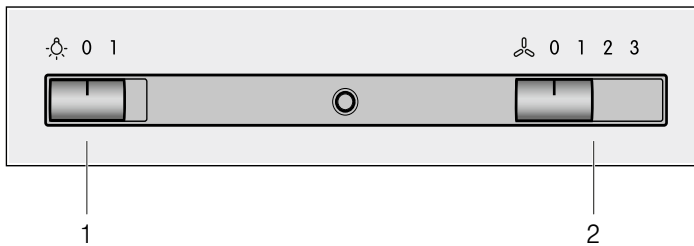

1 Lighting

0	Switching off the lighting
1	Switching on the lighting

2 Fan

0	Switching off the fan
1	Switching on fan setting 1
2	Switching on fan setting 2
3	Switching on fan setting 3

Setting the fan

Note: Always adjust the fan strength to meet current conditions. If there is a large build-up of steam or fumes, select a high fan setting.

Switching on

Set the slide control to position 1, 2 or 3.

Note: When the fan is on, an LED is lit.

Switching off

Set the slide control to position 0.

Lighting

The lighting can be switched on and off independently of the ventilation system.

Set the slide control to position 1.

Cleaning and maintenance

⚠ Risk of burns!

The appliance becomes hot during operation. Allow the appliance to cool down before cleaning.

⚠ Risk of electric shock!

Penetrating moisture may result in an electric shock. Clean the appliance using a damp cloth only. Before cleaning, unplug the appliance from the mains or switch off the fuse in the fuse box.

⚠ Risk of electric shock!

Penetrating moisture may result in an electric shock. Do not use high-pressure cleaners or steam cleaners.

⚠ Risk of injury!

Components inside the appliance may have sharp edges. Wear protective gloves.

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table. Do not use:

- Harsh or abrasive cleaning agents,
- Cleaning agents with a high alcohol content,
- Hard scouring pads or cleaning sponges,
- High-pressure cleaners or steam cleaners.

Wash new sponge cloths thoroughly before use.

Follow all instructions and warnings included with the cleaning agents.

Area	Cleaning agent
Stainless steel	Hot soapy water: Clean using a dishcloth and then dry with a soft cloth. Always clean stainless steel surfaces in the direction of the grain. Special stainless steel cleaning products are available from our customer service or from specialist retailers. Apply a very thin layer of the cleaning product with a soft cloth.
Painted surfaces	Hot soapy water: Clean using a damp dishcloth and then dry with a soft cloth. Do not use any stainless steel cleaners.
Aluminium and plastic	Glass cleaner: Clean with a soft cloth.
Glass	Glass cleaner: Clean with a soft cloth. Do not use a glass scraper.
Control elements	Hot soapy water: Clean using a damp dishcloth and then dry with a soft cloth. Risk of electric shock caused by penetrating moisture. Risk of damage to the electronics from penetrating moisture. Never clean control elements with a wet cloth. Do not use any stainless steel cleaners.

Removing the fleece grease filter

Risk of fire!

 
The grease deposits in the grease filter may catch fire.

Replace the grease filter at least every 2 months.


Never operate the appliance without a grease filter.

Note: Only use genuine replacement filters. This ensures compliance with safety regulations and optimal performance of the appliance.


1. Press the locks on the left and right of the filter grid.

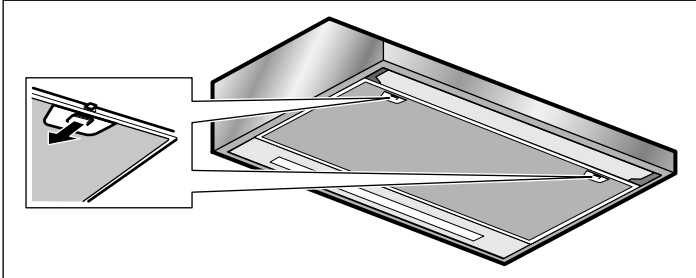

 
2. Swing the filter grid down.

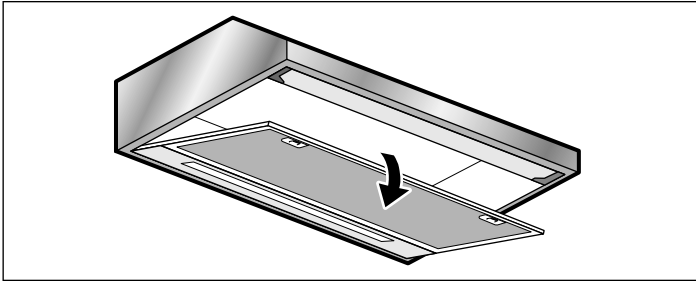

 3. Position the filter grid at an angle and remove it.

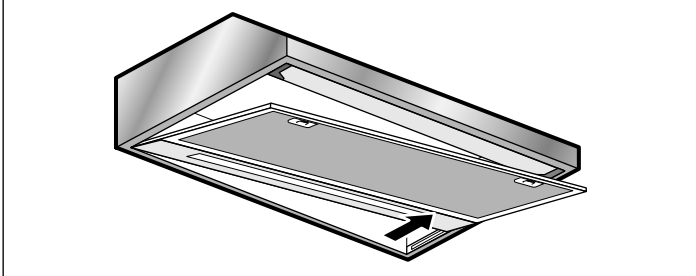

 4. Remove the wires and then remove the fleece grease filter.

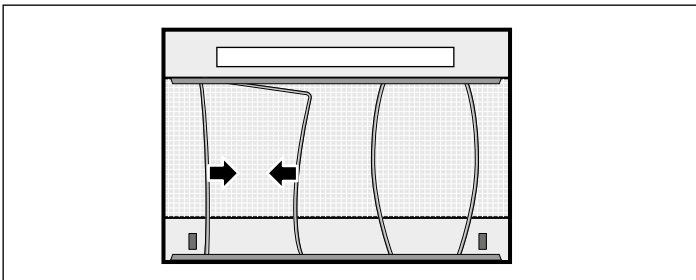

5. After removing the fleece grease filter, clean the inside of the appliance.

6. Clean the filter grid.

Fitting the fleece grease filter

1. Trim the new fleece grease filter to the required size and place it in the filter grid.
2. Clamp the fleece grease filter in place with the wires.
3. Insert the filter grid.

Note: Make sure that the locks on the left and right of the filter grid engage.

Changing the activated charcoal filter (only in air recirculation mode)

To ensure effective odour removal, the filters must be serviced regularly.

 
The activated charcoal filters must be replaced at least every 4 months.

Notes

- The activated charcoal filters are not included with the appliance. Activated charcoal filters are available from specialist retailers, from our customer service or from our online shop.
- The activated charcoal filters cannot be cleaned or reactivated.

Note: Only use genuine replacement filters. This will ensure that the appliance performs optimally.

1. Remove the fleece grease filter; see the section entitled *Removing the fleece grease filter*.
2. Undo the threaded connections on the activated charcoal filter covers.

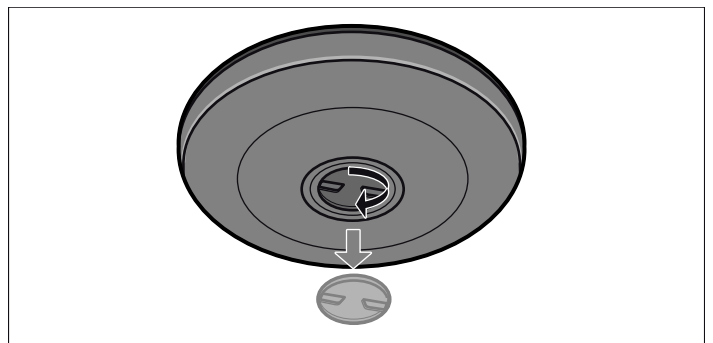

3. Remove the activated charcoal filter.

4. Insert the new activated charcoal filter.

5. Screw the covers into place.

6. Fit the fleece grease filter; see the section entitled *Fitting the fleece grease filter*.

What to do in the event of a fault

You can often easily rectify technical faults with the appliance yourself. Please read the following notes before calling customer service.

Risk of electric shock!

Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained customer service technicians. If the appliance is defective, unplug the appliance from the mains or switch off the fuse in the fuse box. Call customer service.

Fault table

Fault	Possible cause	Solution
Appliance not working	The plug is not plugged into the mains	Connect the appliance to the mains electricity supply
	Power failure	Check whether other kitchen appliances are working
	The fuse is faulty	Check in the fuse box to make sure that the fuse for the appliance is in working order
The lighting does not work.	The LED lights are defective.	You can read about this in the section entitled "Replacing the LED lights".

Replacing the LED lights

 
Risk of electric shock!

When changing the bulbs, the bulb socket contacts are live. Before changing the bulb, unplug the appliance from the mains or switch off the fuse in the fuse box.



Risk of injury!

The light emitted by LED lights is very dazzling and can damage the eyes (risk group 1). Do not look directly into the switched on LED lights for longer than 100 seconds.

Important! Only use bulbs of the same type and wattage.

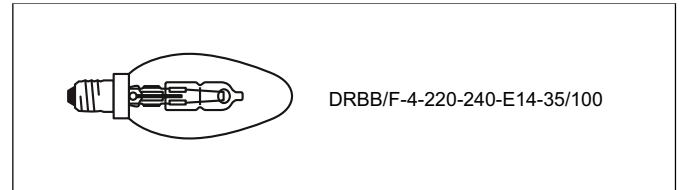

  1. Lift the bulb cover slightly and push towards the outside of the appliance.
2. Unscrew the bulb and replace it with a bulb of the same type.

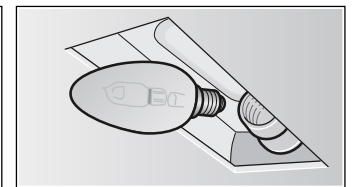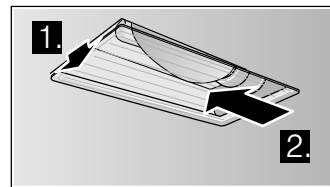

3. Refit the bulb cover.
4. Insert the mains plug or switch on the fuse again.


Customer service

Our customer service is there for you if your appliance needs to be repaired. We will always find an appropriate solution in order to avoid unnecessary visits by engineers.

When calling us, please give the product number (E no.) and the production number (FD no.) so that we can provide you with the correct advice. The rating plate with these numbers can be found inside the appliance (remove the filter grid to gain access).

You can make a note of the numbers of your appliance and the telephone number of the customer service in the space below to save time should it be required.

E no. _____ **FD no.** _____

Customer service 

Please note that a visit from a customer service engineer is not free of charge in the event that the appliance has been misused, even during the warranty period.

The contact information for your nearest customer service can be found here or in the enclosed customer service directory.

Obtaining advice and ordering repairs if a fault occurs

- A** 0810 550 511
D 089 69 339 339
CH 0848 840 040


Trust the expertise of the manufacturer. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts for your appliance.

Accessories

(not included with the appliance)


Activated charcoal filter

 DHZ2701

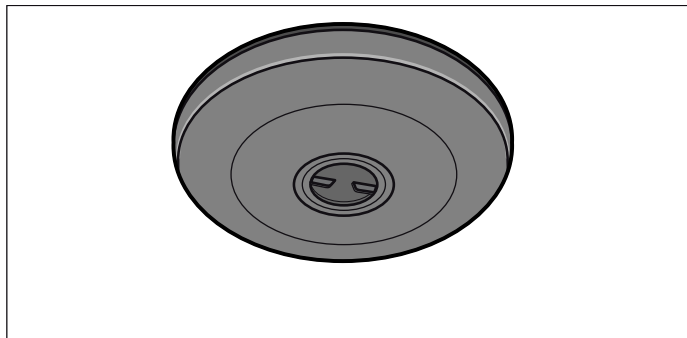

Fleece grease filter

 DHZ2140

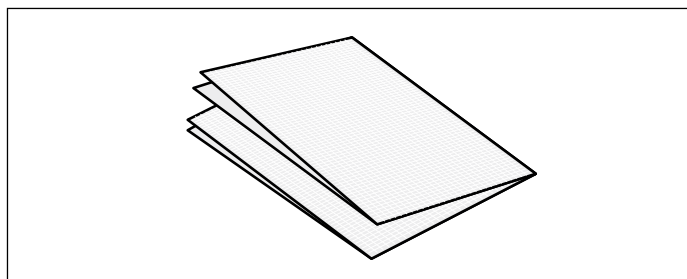



BSH Hausgeräte GmbH

Carl-Wery-Straße 34
81739 München, GERMANY
www.bosch-home.com

A Bosch Company



9001759095

020525