



Product code:

C97TEX004A

Product:

 
Cooker

Model:


EBS 965T IMAA

Product code	Serial No.	Product remark	Issue No.	Issue Date
C97TEX004A				October 2025



Key part information	

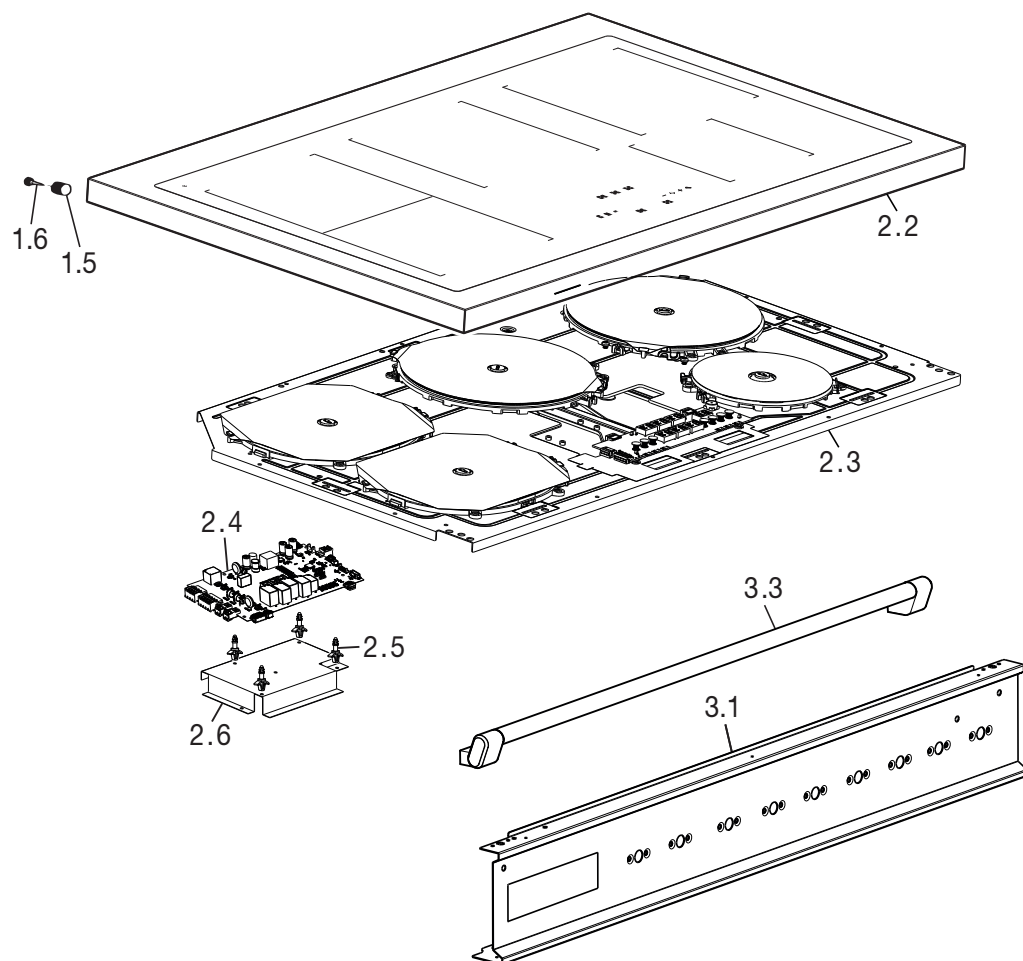


Ref.	Part description	Product code	
		C97TEX004A	
		Feature	Part code
1.5	Plug		040041001
1.6	Screw		001352
2.2	Glass with frame		355VC9709
2.3	Induction module		1032119
2.4	PCB control board		074164
2.5	Peg		071068
2.6	PCB control support		0941075
3.1	Control panel		35C9702ADL
3.2	Towel rail handle		037424001

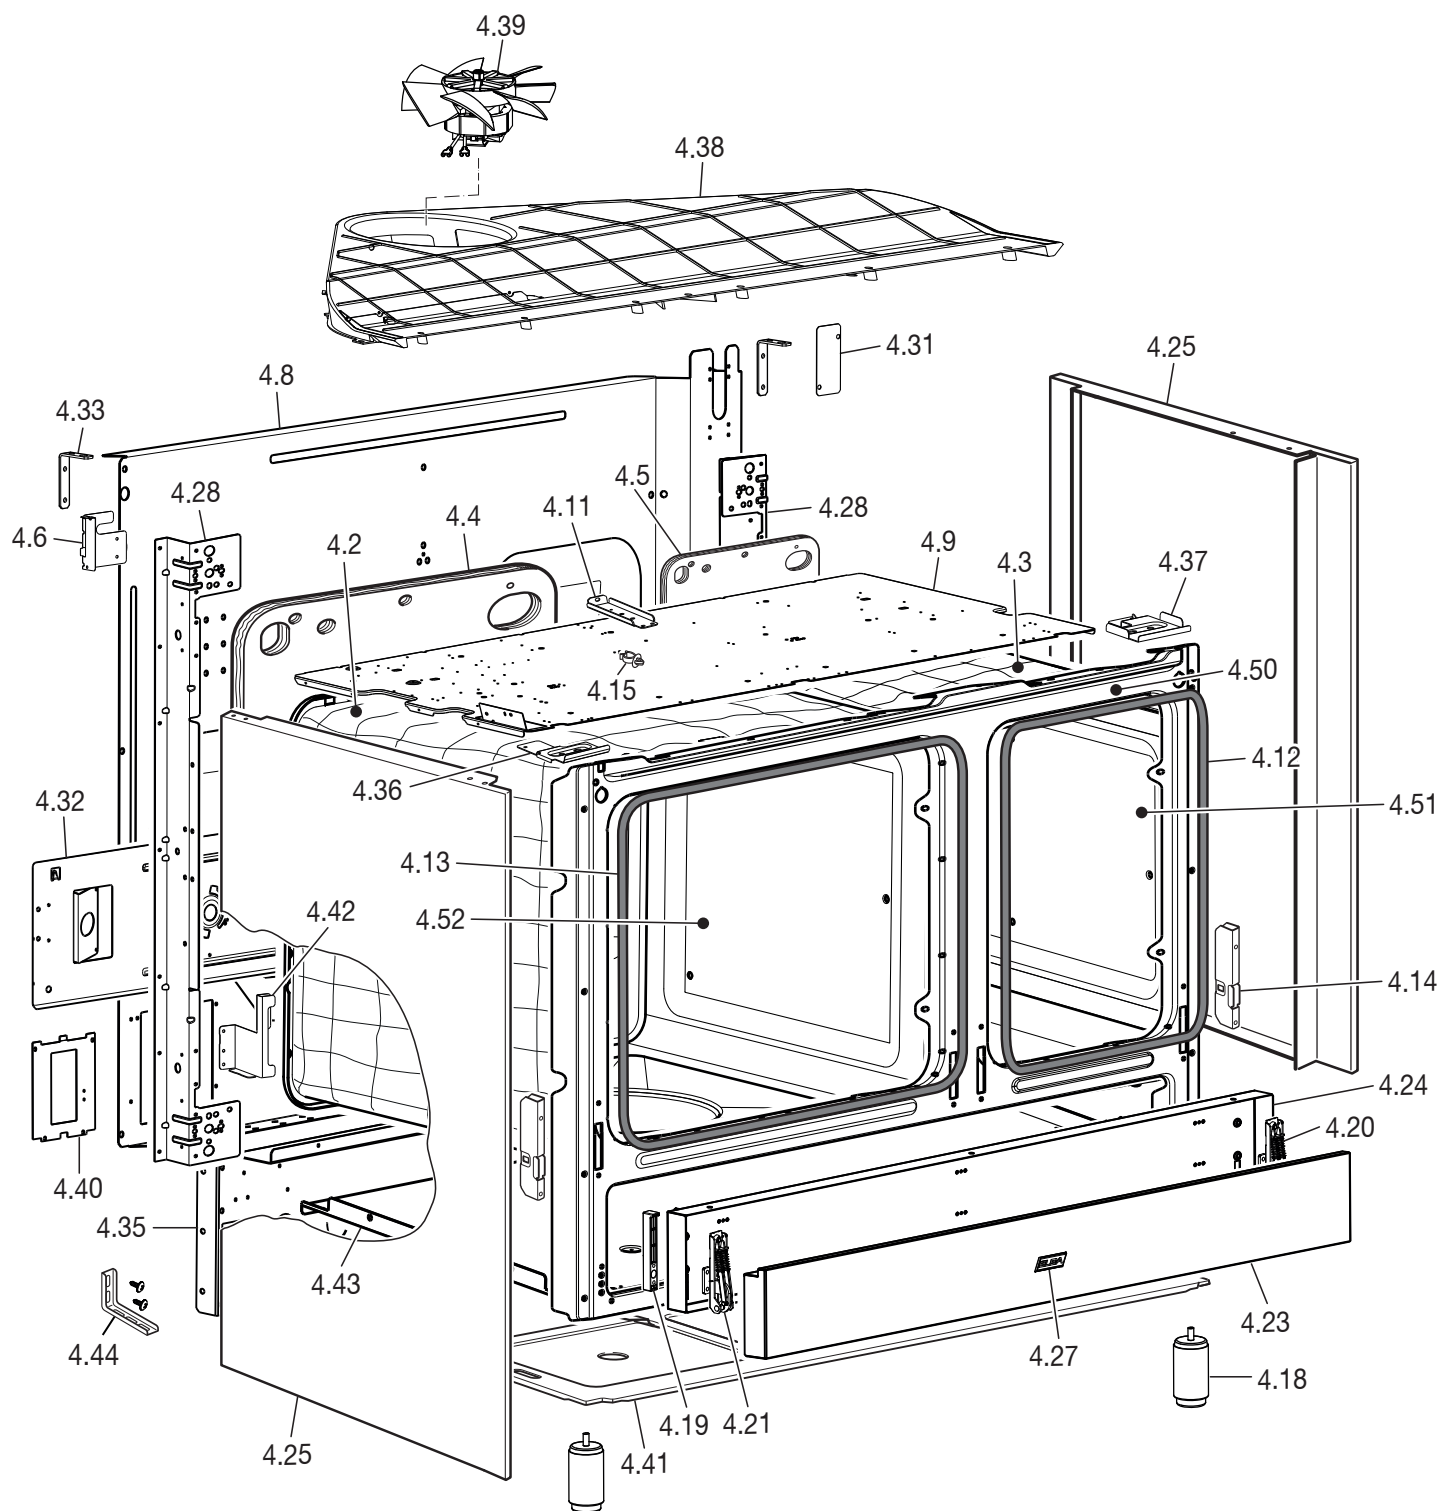 


Ref.	Part description	Product code	
		C97TEX004A	
		Feature	Part code
4.2	Left oven insulation		030306
4.3	Right oven insulation		030312
4.4	Rear insulation left oven		030305
4.5	Rear insulation right oven		030313
4.6	Rear left support bracket		0941052SX
4.8	Rear panel		4119701Z
4.9	Upper shelter		42197001Z
4.11	Rear panel spacer		094895.1
4.12	Right oven seal		053230
4.13	Left oven seal		053226
4.14	Door hinge (female)		063130
4.15	Tube retainer		531533
4.18	Shim		1032153A
4.19	Panel spacer		040102
4.20	Door panel right hinge		063172
4.21	Door panel left hinge		063173
4.23	Front panel		371V9701A
4.24	Inside panel		373V9G01Z
4.25	Side panel		36C9701A
4.27	Badge		081136
4.28	Left / Right rear trim		51B9703
4.31	Rear bracket		094725
4.32	Motor cross-piece		51B9702
4.33	Rear coupler		094886
4.35	Bottom rear panel		4219G03Z
4.36	Hob fixing left bracket		0941050SX
4.37	Hob fixing right bracket		0941050DX
4.38	Cooling fan conveyor		1031842
4.39	Fan motor	220-240 V 50-60 Hz	079092
4.40	Terminal block support		51B9E12
4.41	Lower element cover		45K96006Z
4.42	Left / Right support bracket		0941051
4.43	Lower shelter		4219G02Z
4.44	Anti-tilt bracket		094153
4.50	Body front panel		45B9702G
4.51	Oven cube (Right)		45094ES01G
4.52	Oven cube (Left)		450F7EM71G

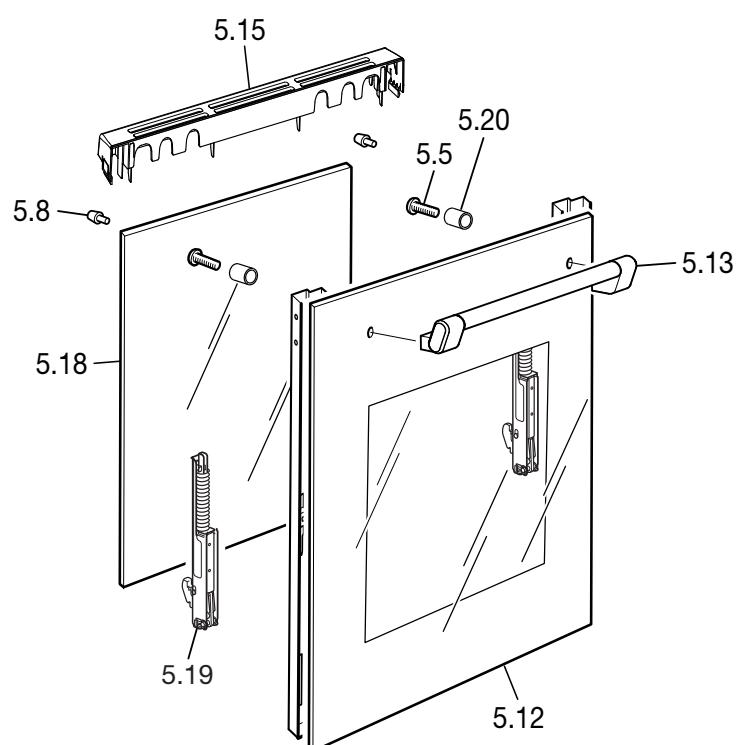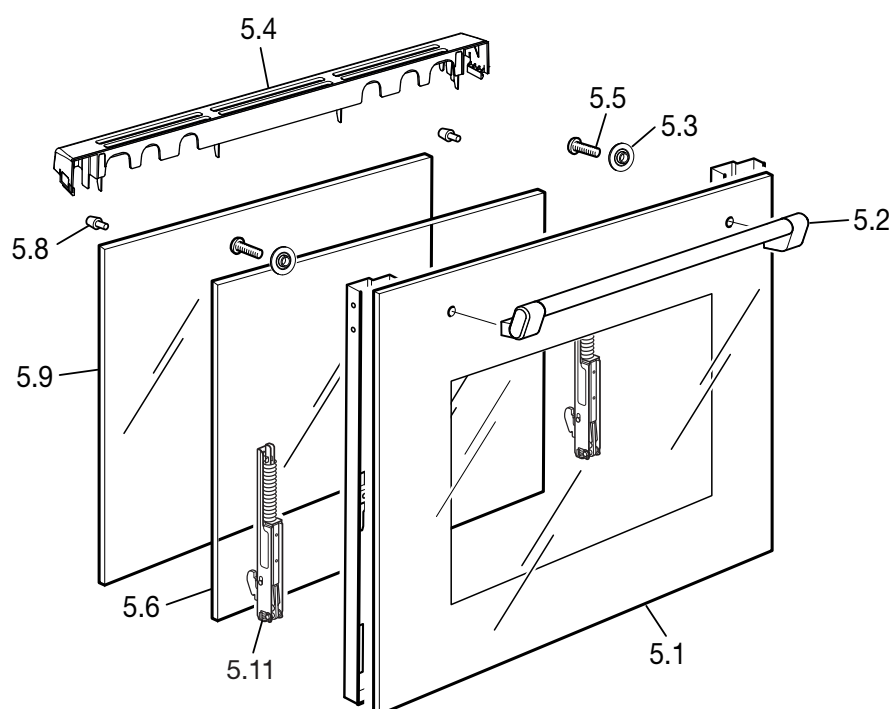  












Ref.	Part description	Product code	
		C97TEX004A	
		Feature	Part code
5.1	Left oven door glass		03297012
5.2	Door handle		037423001
5.3	Handle bush		085108
5.4	Upper door trim		51BF710
5.5	Screw		001265
5.6	Middle inner glass		0313624
5.8	Rubber		040011
5.9	Left oven inner glass		0313608TH
5.11	Door hinge (male)		063163
5.12	Right oven door glass		03294012
5.13	Door handle		037422001
5.15	Upper door trim		51B9404
5.18	Right oven inner glass		0313855TH
5.19	Door hinge (male)		063184
5.20	Handle bush		085101

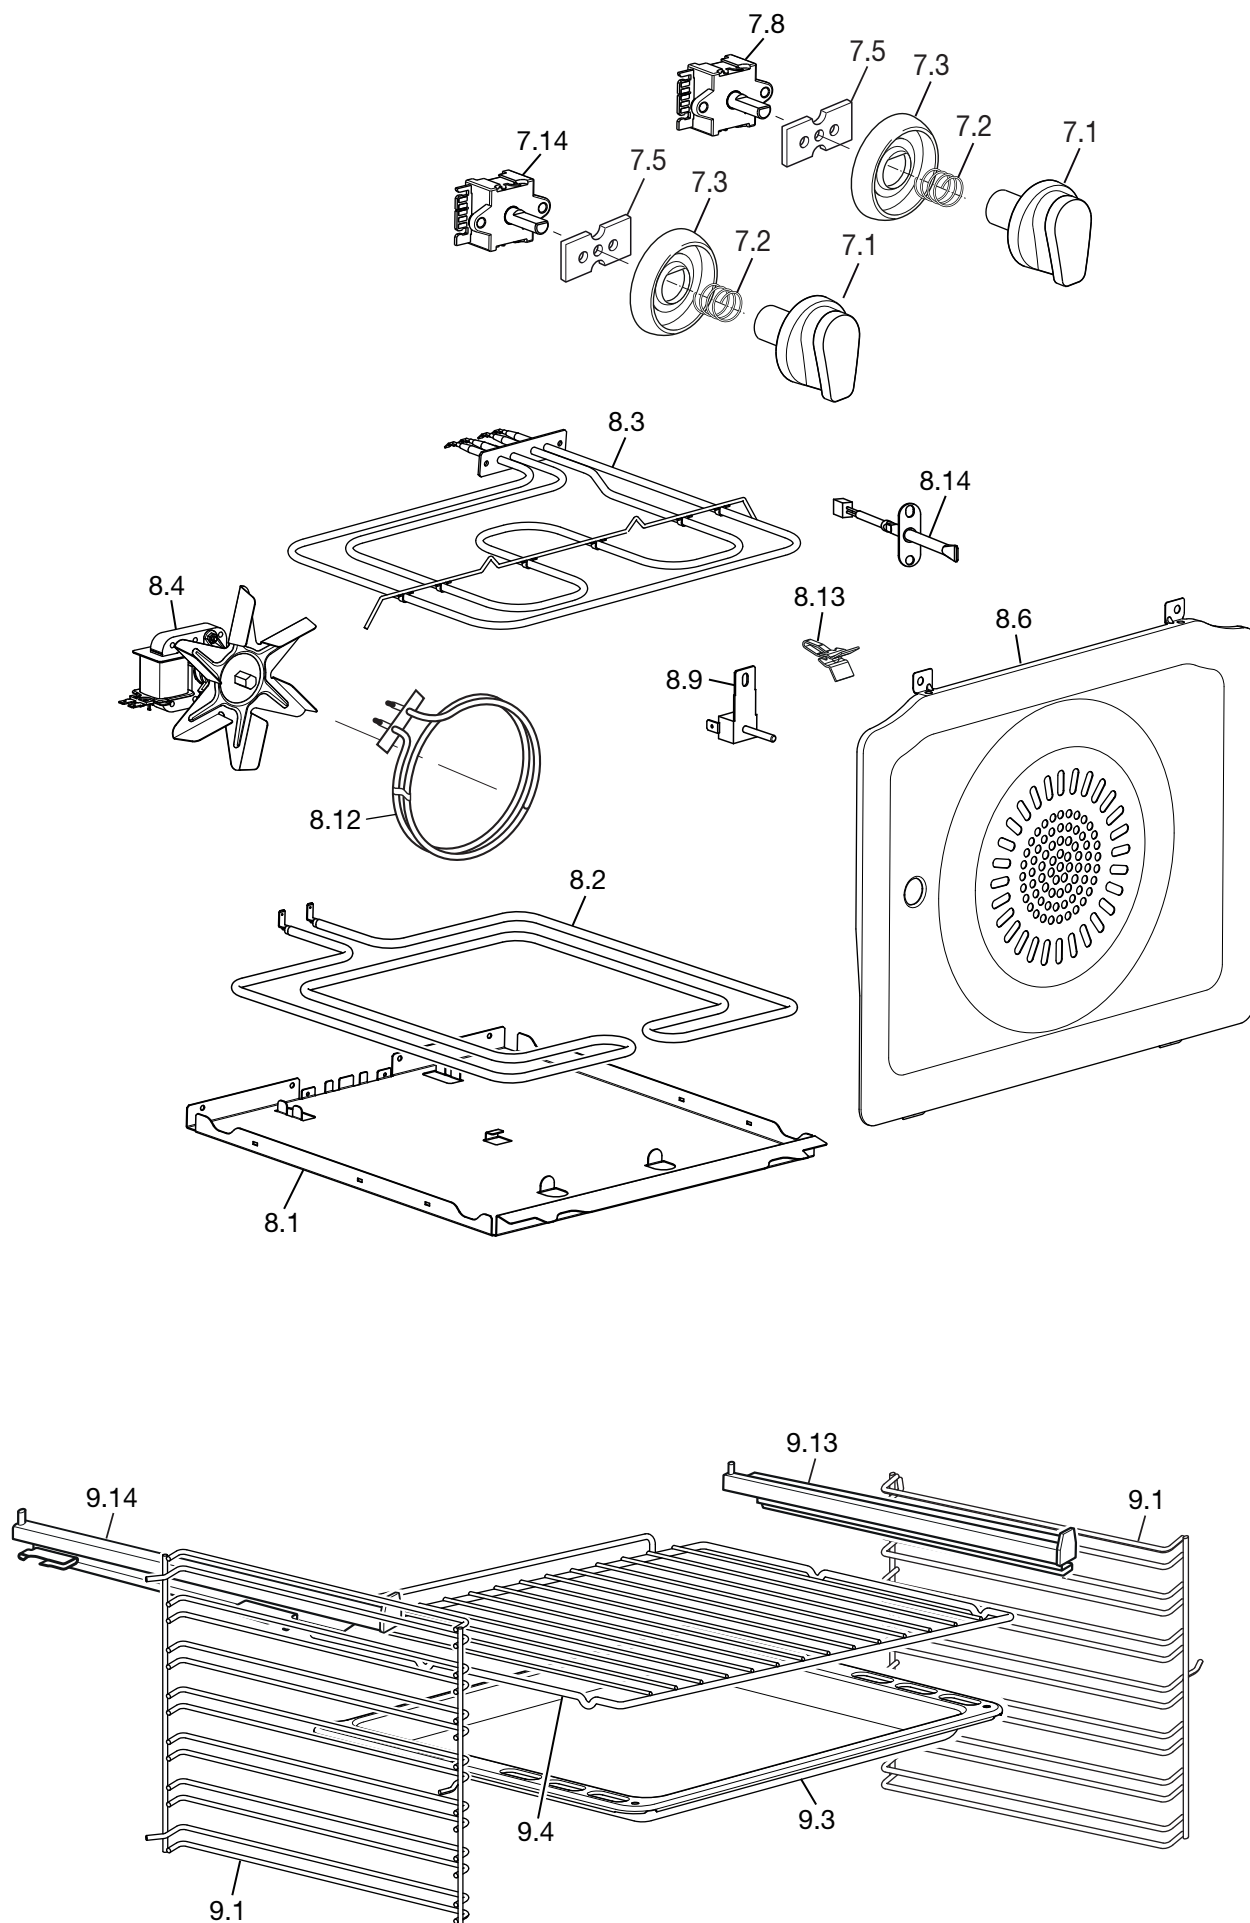 

Ref.	Part description	Product code	
		C97TEX004A	
		Feature	Part code
7.1	Oven knob		218E00A549
7.2	Knob spring		035036
7.3	Left oven function selector knob ring		218300E273
7.5	Spacer		103948
7.8	Temperature selector encoder		050137
7.14	Function selector encoder		050136
8.1	Lower element support		421F7104Z
8.2	Bottom element	230 V	062196004
8.3	Top + grill element		062182004
8.4	Fan motor	220-240 V 50-60 Hz	079091
8.6	Fan diffuser		47AF701G
8.9	Safety probe		107134
8.12	Fan element	230 V	062184004
8.13	Clip		213026
8.14	Temperature sensor		107071
9.1	Shelf support		217859
9.3	Oven tray		48B6101G
9.4	Oven shelf		217823
9.13	Right telescopic runner		1032125
9.14	Left telescopic runner		1032126

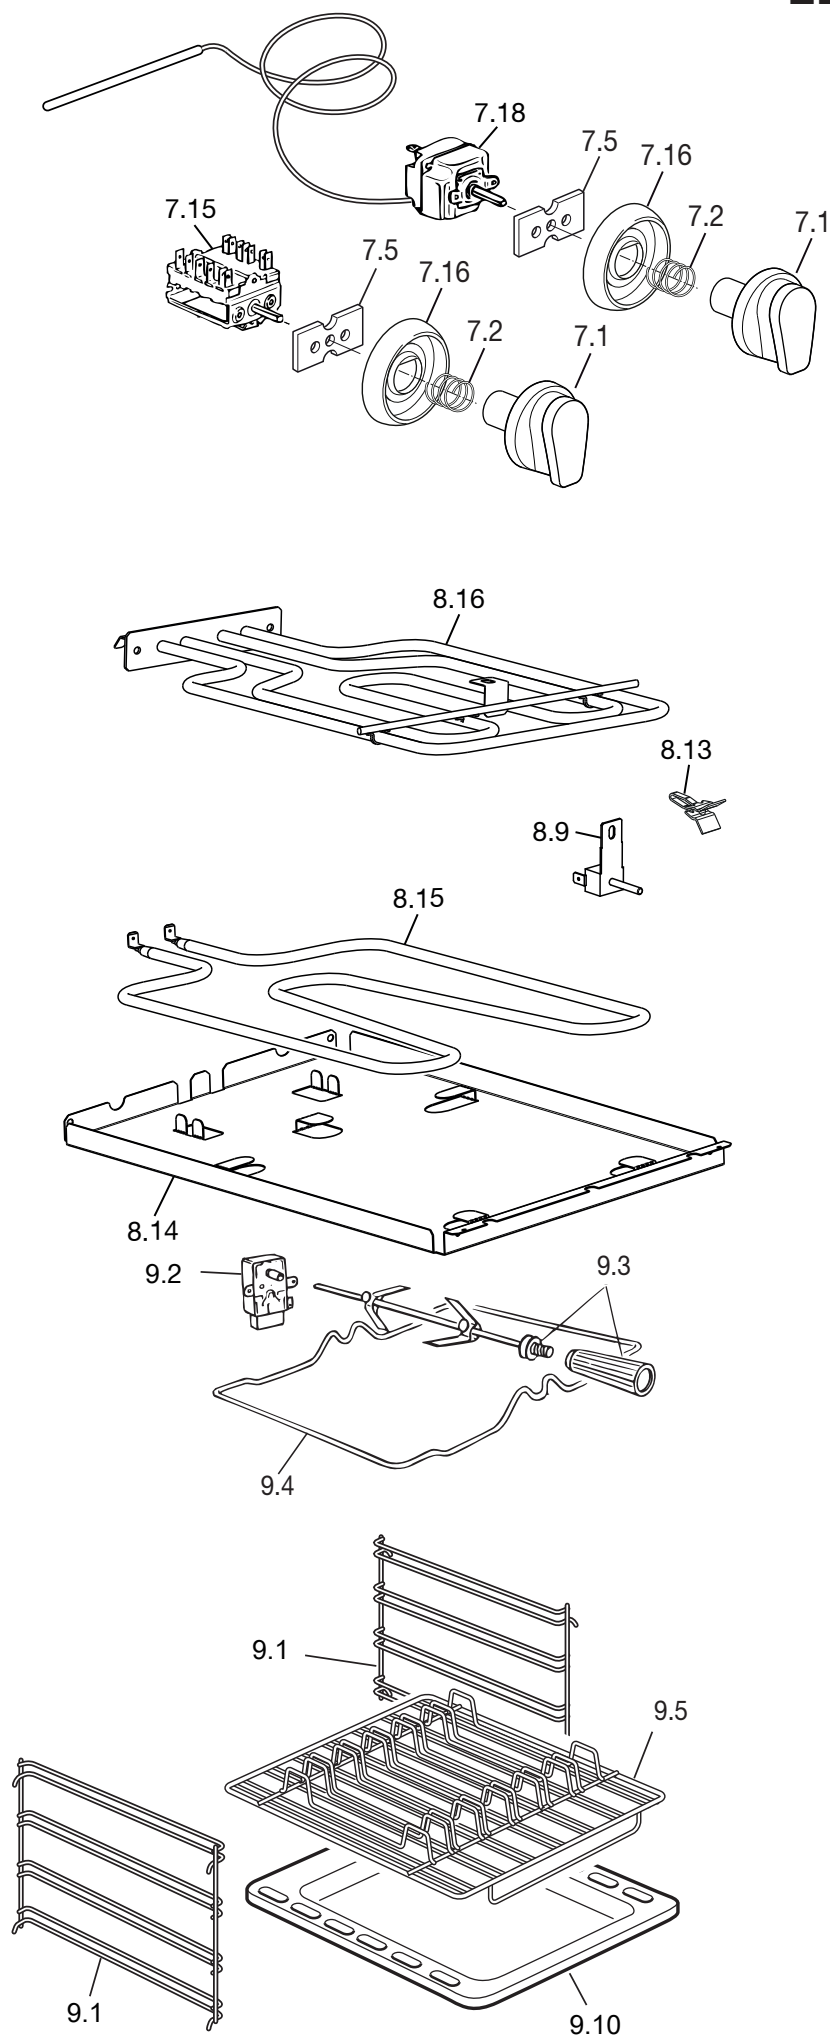 

Ref.	Part description	Product code	
		C97TEX004A	
		Feature	Part code
7.1	Oven knob		218E00A549
7.2	Knob spring		035036
7.5	Spacer		103948
7.15	Right oven switch		050134
7.16	Right oven switch knob ring		218300E273
7.18	Thermostat		066157
8.9	Safety probe		107134
8.13	Clip		213026
8.14	Lower element support		421F4001Z
8.15	Bottom element	230 V	062195004
8.16	Top + grill element		062194004
9.1	Shelf support		217859
9.2	Rotisserie motor	230 V 50-60 Hz	079014
9.3	Rotisserie prong		080026
9.4	Rotisserie support		217870
9.10	Oven tray		48B9401G

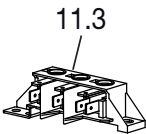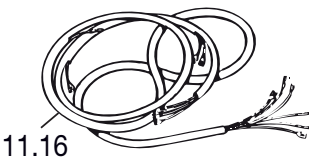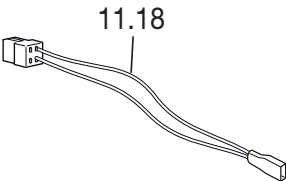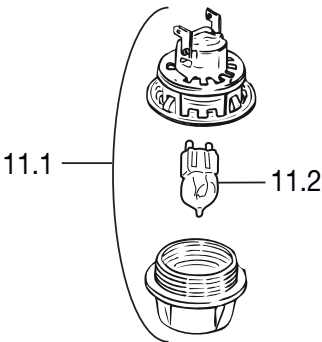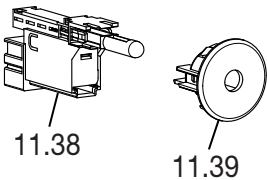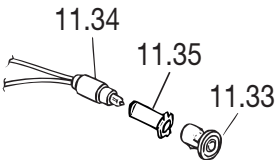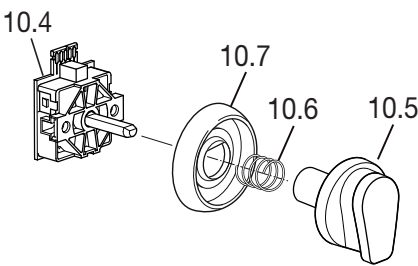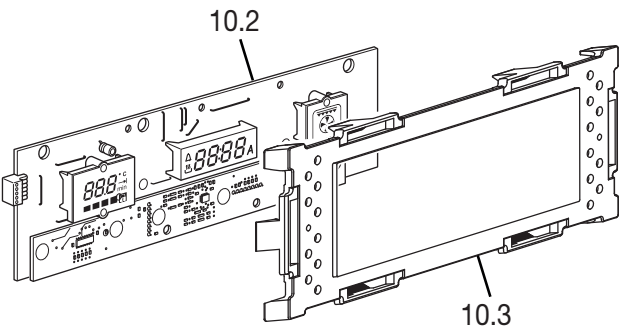           

Ref.	Part description	Product code	
		C97TEX004A	
		Feature	Part code
10.2	Display board		074163
10.3	Display mask		1032127
10.4	Potentiometer		050135
10.5	Knob		218E00A549
10.6	Knob spring		035036
10.7	Potentiometer knob ring		218300E273
11.1	Lamp holder		072026
11.2	Lamp	230 V 25 W	073103
11.3	Terminal block	40A 5P	051087
		40A 3P	051083
11.16	Wiring	Right oven	1133086
	Earth wiring		1133087
	Induction module-Terminal block wiring		1133079
	PCB control board wiring		1133080
11.17	Induction module-Encoders connection		1133078
11.18	PCB board-Sensor connection wires		1133081
	Function encoder-Display connection wires		1032120
	Temperature encoder-Display connection wires		1032121
	PCB-Microswitch connection wires		1032122
	PCB-Display connection wires		1032123
11.33	Control lamp cover	Transparent	073112
11.34	Control lamp	L=230 mm	073109
11.35	Control lamp adapter		1031739
11.36	Cut-off thermostat	55 °C	066224
		80 °C	066145
11.37	Wire fastener		052008
11.38	Microswitch		077095
11.39	Microswitch ring		1032046
-	Instruction booklet	GB	1106800/GB
		NL	1106800/NL