
AEG

aeg.com/register



AWUS040B8B
NSW8S826GT

EN User Manual | **Wine Cabinet** **2**
IS Notendaleiðbeiningar | **Vínkjallari** **19**

Welcome to AEG! Thank you for choosing our appliance.

Get usage advice, brochures, troubleshooting, service and repair information:
www.aeg.com/support

Subject to change without notice.

CONTENTS

1. SAFETY INFORMATION..... 2
2. SAFETY INSTRUCTIONS..... 4
3. INSTALLATION..... 6
4. PRODUCT DESCRIPTION..... 8
5. OPERATION..... 8
6. DAILY USE..... 11
7. HINTS AND TIPS..... 13
8. CARE AND CLEANING..... 14
9. TROUBLESHOOTING..... 15
10. NOISES..... 17
11. TECHNICAL DATA..... 17
12. INFORMATION FOR TEST INSTITUTES..... 17
13. ENVIRONMENTAL CONCERNS..... 18

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 to 8 years are allowed to load and unload the appliance provided that they have been properly instructed.

- This appliance may be used by persons with very extensive and complex disabilities provided that they have been properly instructed.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Children should be supervised to ensure that they do not play with the appliance.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.
- Keep all packaging away from children and dispose of it appropriately.

1.2 General Safety

- This appliance is for storing wine only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in, offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: Do not damage the refrigerant circuit.
- WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- When the appliance is empty for long period, switch it off, defrost, clean, dry and leave the door open to prevent mould from developing within the appliance.

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.

2. SAFETY INSTRUCTIONS

2.1 Installation

⚠ WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Do not use the appliance before installing it in the built-in structure due to safety manner.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Make sure the air can circulate around the appliance.
- At first installation or after reversing the door wait at least 4 hours before connecting the appliance to the power supply. This is to allow the oil to flow back in the compressor.
- Before carrying out any operations on the appliance (e.g. reversing the door), remove the plug from the power socket.
- Do not install the appliance close to radiators or cookers, ovens, or hobs, unless otherwise specified in the installation instructions.
- Do not expose the appliance to the rain.
- Do not install the appliance where there is direct sunlight.
- Do not install this appliance in areas that are too humid or too cold.
- When you move the appliance, lift it by the front edge to avoid scratching the floor.

2.2 Electrical connection

⚠ WARNING!

Risk of fire and electric shock.

⚠ WARNING!

When positioning the appliance, ensure the supply cord is not trapped or damaged.

⚠ WARNING!

Do not use multi-plug adapters and extension cables.

- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Make sure not to cause damage to the electrical components (e.g. mains plug, mains cable, compressor). Contact the Authorised Service Centre or an electrician to change the electrical components.
- The mains cable must stay below the level of the mains plug.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

2.3 Use

⚠ WARNING!

Risk of injury, burns, electric shock or fire.

 The appliance contains flammable gas, isobutane (R600a), a natural gas with a high level of environmental compatibility. Be careful not to cause damage to the refrigerant circuit containing isobutane.

- Do not change the specification of this appliance.
- Any use of the built-in product as free-standing is strictly prohibited.
- Do not put electrical appliances (e.g. ice cream makers) in the appliance unless they are stated applicable by the manufacturer.
- If damage occurs to the refrigerant circuit, make sure that there are no flames and sources of ignition in the room. Ventilate the room.
- Do not let hot items to touch the plastic parts of the appliance.
- Do not store flammable gas and liquid in the appliance.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not touch the compressor or the condenser. They are hot.

2.4 Internal lighting

⚠ WARNING!

Risk of electric shock.

- This product contains one or more light sources of energy efficiency class E.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

2.5 Care and cleaning

⚠ WARNING!

Risk of injury or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- This appliance contains hydrocarbons in the cooling unit. Only a qualified person must do the maintenance and the recharging of the unit.
- Regularly examine the drain of the appliance and if necessary, clean it. If the drain is blocked, defrosted water collects in the bottom of the appliance.

2.6 Service

- To repair the appliance contact the Authorised Service Centre. Use original spare parts only.
- Please note that self-repair or non-professional repair can have safety consequences and might void the guarantee.
- The following spare parts will be available for 7 years after the model has been discontinued: thermostats, temperature sensors, printed circuit boards, light sources, door handles, door hinges, trays and baskets. Please note that some of these spare parts are only available to professional repairers, and that not all spare parts are relevant for all models.
- Door gaskets will be available for 10 years after the model has been discontinued.

2.7 Disposal

⚠ WARNING!

Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door to prevent children and pets to be closed inside of the appliance.
- The refrigerant circuit and the insulation materials of this appliance are ozone-friendly.
- The insulation foam contains flammable gas. Contact your municipal authority for


information on how to discard the appliance correctly.


- Do not cause damage to the part of the cooling unit that is near the heat exchanger.

3. INSTALLATION

⚠ WARNING!
Refer to Safety chapters.

3.1 Dimensions

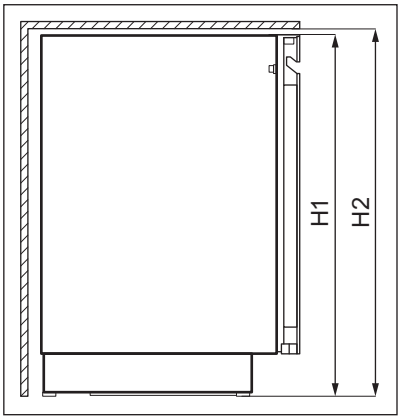

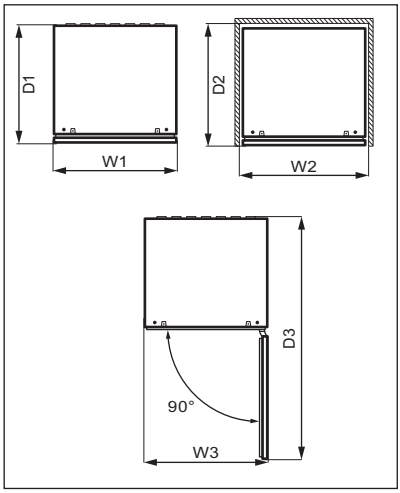

Overall dimensions [1]		
H1	mm	818
W1	mm	595
D1	mm	577

[1] the height, width and depth of the appliance without the handle

Space required in use [2]		
H2	mm	820
W2	mm	600
D2	mm	580

[2] the height, width and depth of the appliance including the handle, plus the space necessary for free circulation of the cooling air

Overall space required in use [3]		
H2	mm	820
W3	mm	600
D3	mm	1162

[3] the height, width and depth of the appliance including the handle, plus the space necessary for free circulation of the cooling air, plus the space necessary to allow door opening to the minimum angle permitting removal of all internal equipment

3.2 Location

To ensure appliance's best functionality, you should not install the appliance in the nearby of the heat source (oven, stoves, radiators, cookers, hoods, hobs or extractor hobs) or in a place with direct sunlight. Make sure that air can circulate freely around the back of the cabinet.

This appliance should be installed in a dry, well ventilated indoor position.

This appliance is intended to be used at ambient temperature ranging from 10°C to 38°C.

ⓘ

The correct operation of the appliance can only be guaranteed within the specified temperature range.

ⓘ

If you have any doubts regarding where to install the appliance, please turn to the vendor, to our customer service or to the nearest Authorised Service Centre.

ⓘ

It must be possible to disconnect the appliance from the mains power supply. The plug must therefore be easily accessible after installation.

3.3 Electrical connection

- Before plugging in, ensure that the voltage and frequency shown on the rating plate correspond to your domestic power supply.
- The appliance must be earthed. The power supply cable plug is provided with a contact for this purpose. If the domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician.
- The manufacturer declines all responsibility if the above safety precautions are not observed.
- This appliance complies with the E.E.C. Directives.

3.4 Levelling

When placing the appliance make sure that it stands level. This can be achieved by two adjustable feet at the bottom in front.

3.5 Door reversibility


Please refer to the separate document with instructions on installation and door reversal.

⚠ **CAUTION!**

At every stage of reversing the door protect the floor from scratching with a durable material.

4. PRODUCT DESCRIPTION

4.1 Product overview

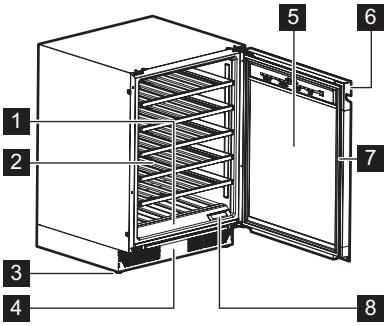


1 Control panel
2 Shelf
3 Foot
4 Decorative frame
5 Triple-glazed glass door
6 Handle
7 Gasket
8 Air filter

5. OPERATION

⚠ WARNING!


Do not spill any liquids on the control panel. This may damage the equipment and increase the risk of electric shock.

5.1 Control panel

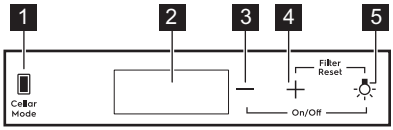

1 Cellar Mode key
2 Display
3 Temperature decrease key
4 Temperature increase key
5 Light key

5.2 Display

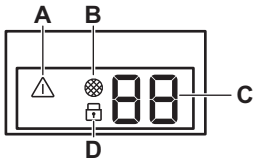

A. Alarm indicator
B. Filter reset indicator
C. Temperature indicator
D. Child lock indicator

5.3 Switching on and off

To switch on the appliance:

1. Insert the plug into the wall socket.
2. If the display is off, tap and hold the **Temperature decrease key** and **Light key** for 3 seconds.

The display shows the default set temperature 12°C.

To switch off the appliance, repeat step 2 and pull out the plug from the wall socket.

To select a different temperature, refer to the "Temperature regulation" section.

5.4 Temperature regulation

ⓘ

The default set temperature for the wine cabinet is 12°C.

ⓘ

The temperature can be adjusted between +5 and +20°C.

To set the temperature, tap the Temperature increase or decrease key for the compartment:

- Single tap shows the current set temperature.
- Second tap increases or decreases the temperature by one degree.
- To speed up the selection, tap and hold the Temperature increase or decrease key until you reach the desired temperature.

ⓘ

By default, the temperature digits show the current temperature. When you tap once or start selecting a new setting, the displayed digits blink. After 3 seconds without tapping the keys, the digits stop blinking and the current temperature is displayed.

To set the right temperature for each type of wine, refer to the "Daily use" chapter.

5.5 Light setup

Tap the Light key once to turn the light on or off. The default light setting is **1A** for the light behaviour and **9L** for the light brightness.

ⓘ

The light has no negative effect on the quality of wine.

You may adjust behaviour and brightness of the light.

To set the light behaviour or brightness:

1. Tap and hold the Light key for 3 seconds to enter the light setting menu.
2. Light behaviour **A** appears. Tap the Light key again to go to the light brightness **L**.
3. Tap the temperature regulators repeatedly to set the desired light behaviour or brightness.

Light behaviour (**A**):

- **1A** door open - lights on at the highest dimming level, door closed - lights turn off,

- **2A** door open - lights on at the highest dimming level, door closed - lights on at the selected dimming level,
- **3A** door open and closed - lights on at the selected dimming level,
- **4A** door open - lights on at the selected dimming level, door closed - lights on at the highest dimming level.

Light brightness (**L**):

- **9L** is the brightest setting while **1L** is the dimmest one.

5.6 Cellaring

In this mode, the appliance switches to the preset default temperature of 12°C.

To activate the Cellaring mode, tap the Cellar Mode key. **CE** on the display starts blinking. Wait 5 seconds. The mode is active when **CE** stops blinking and is lit at half brightness.

To deactivate the Cellaring mode, tap Cellar Mode once again. When the Cellaring mode is deactivated, the temperature returns to its previous setting.

5.7 Child Lock mode

Activate the Child Lock mode to lock the keys from an unintentional operation.

To activate the Child Lock, tap and hold the Cellar Mode key for 3 seconds. When the mode is on, the lock indicator lights up at full brightness. After 3 seconds, the lock indicator dims to half brightness.

ⓘ

If you press any key other than Cellar Mode, the lock indicator blinks three times.

To deactivate the Child Lock mode, tap the corresponding key again.

ⓘ

The Child Lock mode deactivates after electricity interruption or unplugging the appliance.

5.8 Reset air filter

To reset the air filter alarm:

1. Change the carbon air filter. Refer to the "Replacing air filter" section.
2. Tap and hold the Temperature increase and Light keys simultaneously for 5 seconds.
3. The filter indicator turns off for the next 6 months.

ⓘ

After 6 months, the display shows the filter indicator to remind you to replace filter.

5.9 Mute or unmute sounds

The sounds are enabled by default.

To mute or unmute the sounds:

1. Tap and hold the Cellar Mode and Temperature increase keys simultaneously for 5 seconds.
2. The display shows **Of** for 2 seconds when the sounds are muted, or **On** for 2 seconds when the sounds are unmuted.

5.10 Changing temperature units

To switch the temperature units between °C and °F:

1. Tap simultaneously the Cellar Mode and Temperature decrease keys.
2. Once you set your preferable unit, **°C** or **°F** blinks on the display for 5 seconds.

5.11 Demo mode

Activate the Demo mode to demonstrate the appliance's features.

To activate the Demo mode, tap and hold the Light and Cellar Mode keys simultaneously for 10 seconds.

Once the mode is on, the display shows **dE** and **On** blinking alternately for 5 seconds.

The above message is displayed every 5 minutes to remind you that the appliance is in the Demo mode.

To deactivate the Demo mode, repeat the above procedure.

Once you deactivate the mode, the display shows **dE** and **Of** blinking alternately for 5 seconds.

5.12 High and low temperature alarm

High temperature alarm

The alarm activates when the compartment's temperature is 5°C higher than the set temperature for more than 60 minutes.

During the alarm:

- the display shows **Hº**
- the alarm indicator flashes

Low temperature alarm

The alarm activates when the compartment's temperature is 2°C lower than the set temperature for more than 60 minutes.

During the alarm:

- the display shows **Lº**
- the alarm indicator flashes

Press any key on the control panel to turn off the alarm.

- When the appliance returns to the set temperature, the normal display restores. Check if the wine inside is not spoiled.
- If the temperature is still too high or too low, the alarm activates again after 60 minutes.

ⓘ

The alarm does not activate within the first 90 minutes after switching on the appliance.

5.13 Door open alarm

If the door is left open for approximately 5 minutes, the lights start to flash and display shows alternately **dr** and **OP**. After 2 more minutes the sound is on.

The alarm stops after closing the door or after pressing any key on the control panel.

ⓘ

The alarm goes off again after 5 minutes if the door is still open.

6. DAILY USE

6.1 Wine storage

ⓘ

This appliance is intended to be used exclusively for the storage of wine.


The storage time for wine depends on age, alcoholic content, type of grapes and level of fructose and tannin in it. At the time of purchase, check if the wine is already aged or if it will improve over time.

Recommended storage temperatures:


- For champagne and sparkling wines, between +6°C and +8°C.
- For white wines, between +10°C and +12°C.
- For rose and light red wines, between +12°C and +16°C.
- Aged red wines, between +14°C and +18°C.

The appliance is designed to store up to 40 Bordeaux bottles (0.75 l) by placing:

- 5 bottles on level 1,
- 7 bottles on levels 2 - 6,
- Storage levels

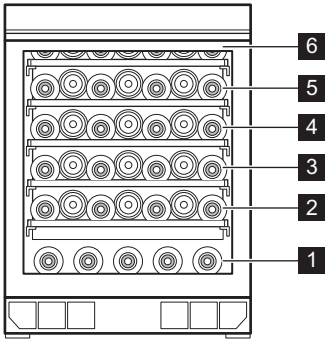

Full shelf on levels 2 - 6

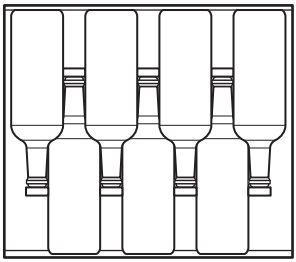


6.2 Removing and installing shelves

Removing shelves

To remove the shelf:


1. Open the wine cabinet door completely.
2. Pull the shelf out.
3. Grab the shelf in the middle, lift it up slightly and take it out of the wine cabinet.

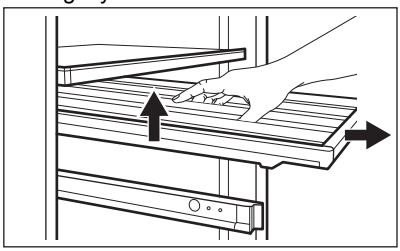


Installing shelves

To put the shelf back into its initial position:


1. Pull out the shelf's rails completely.
2. Position the shelf's rear mounts on the rails, so they are engaged on both sides.

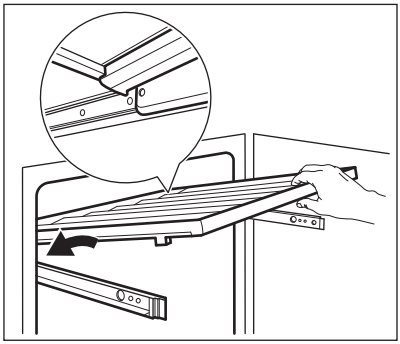

3. Align the guides in the front.

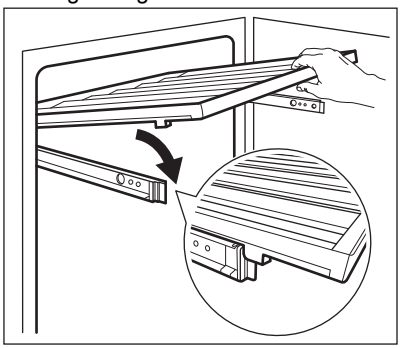


4. Press the back of the shelf down firmly to check if it is placed and engaged correctly on the rails and push it back into the appliance.

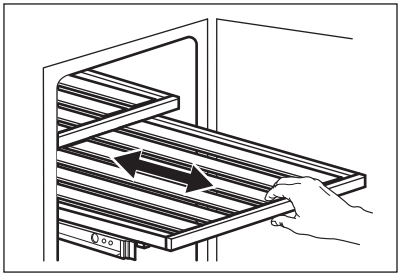

⚠ CAUTION!

Before placing any wine bottles on the shelves, make sure they are properly engaged on the rails.

Check for the possible wrong shelf positioning:

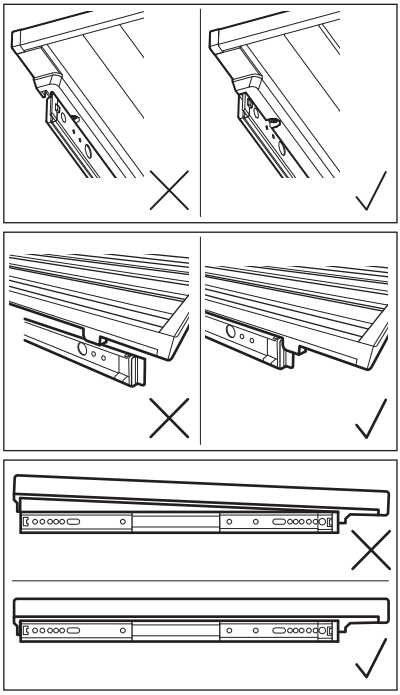


Use the wooden shelves only to store bottles.

6.3 Replacing air filter

Your appliance is equipped with the air carbon filter located next to the control panel. Refer to the "Product description" chapter.

The filter purifies air from unwanted odours in the wine cabinet, improving the storage quality.
To replace the air filter:

1. Locate the filter and detach it from the appliance. Remove its cover.
2. Remove the old filter.
3. Take out the new filter from the plastic bag.
4. Insert the new filter ensuring the side with the text is facing upward.

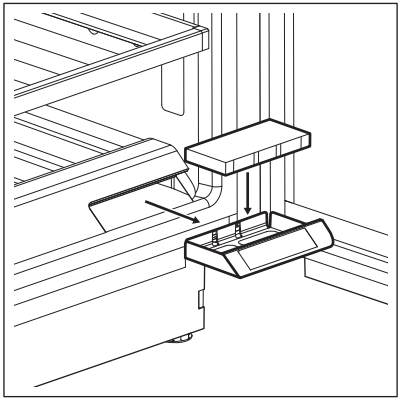

5. Put the filter cover back and install it back into the appliance.
6. Go to the control panel and reset the filter to deactivate the alarm. Refer to the "Reset air filter" section.

To get the best performance, the filter should be changed every 6 months. New active filter can be purchased from your local dealer or through the website. The part number is printed on the plastic bag.

7. HINTS AND TIPS

7.1 Hints for energy saving

- The internal configuration of the appliance is the one that ensures the most efficient use of energy.
- Do not open the door frequently or leave it open longer than necessary.
- Ensure a good ventilation. Do not cover the ventilation grilles or holes.

8. CARE AND CLEANING

⚠ WARNING!

Refer to Safety chapters.

8.1 General warnings

⚠ CAUTION!

Unplug the appliance before carrying out any maintenance operation.

ⓘ

This appliance contains hydrocarbons in its cooling unit; maintenance and recharging must therefore only be carried out by authorized technicians.

ⓘ

The accessories and parts of the appliance are not suitable for washing in a dishwasher.

8.2 Cleaning the interior

Before using the appliance for the first time, the interior and all internal accessories should be washed with lukewarm water and some neutral soap to remove the typical smell of a brand-new product, then dried thoroughly.

⚠ CAUTION!

Do not use detergents, abrasive powders, chlorine or oil-based cleaners as they will damage the finish.

8.3 Periodic cleaning


The equipment has to be cleaned regularly:

1. Clean the inside with lukewarm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a litre of water.
2. Wring excess water out of sponge or cloth when cleaning the area of the controls, or any electrical parts.
3. Clean the outside of the appliance with warm water and some neutral soap.
4. Regularly check the door seals and wipe them clean to ensure they are clean and free from debris.
5. Rinse and dry thoroughly.

8.4 Cleaning the drain

Periodically clean the drain hole to prevent water from overflowing and dripping onto the stored bottles. The drain hole is located on the rear wall in the lower left part of the appliance.

Before cleaning, remove the two bottom shelves. To reach the drain more easily, slightly press the covering grid. For cleaning purpose, use a soft tube cleaner.

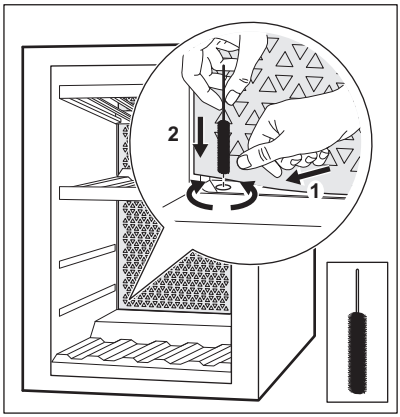

ⓘ

Refer to the "Removing and installing shelves" chapter for instructions on how to remove and install the shelves.

8.5 Periods of non-operation

When the appliance is not in use for long periods, take the following precautions:

1. Disconnect the appliance from electricity supply.
2. Remove all items.
3. Clean the appliance and all accessories.

4. Leave the door open to prevent unpleasant smells.

When the appliance is not in use due to power failure:

- Most power failures are corrected within a few hours and don't affect the temperature of your appliance if you minimize the door opening.
- If the power is going to be off for a longer time, you need to take the proper steps described above.

9. TROUBLESHOOTING

⚠ WARNING!

Refer to Safety chapters.

9.1 What to do if...

Problem	Possible cause	Solution
The appliance does not operate.	The appliance is switched off.	Switch on the appliance.
	The mains plug is not connected to the mains socket correctly.	Connect the mains plug to the mains socket correctly.
	There is no voltage in the mains socket.	Connect a different electrical appliance to the mains socket, to check if electricity is flowing. If not, contact a qualified electrician.
	The circuit breaker tripped or a blown fuse.	Turn on the circuit breaker or change the fuse.
The compressor operates continually.	Temperature is set incorrectly.	Refer to the "Operation" chapter.
	The room temperature is too high.	Refer to the "Installation" chapter.
	The door is opened too often.	Do not keep the door open longer than necessary.
	The door is not closed correctly.	Refer to the "Closing the door" section.
The light does not work.	The light is turned off.	Turn on the light. Refer to the "Light setup" section.
	The appliance is not plugged in.	Connect the appliance.
	The circuit breaker tripped or a blown fuse.	Turn on the circuit breaker or change the fuse.
	The lamp is defective.	Contact the Authorised Service Centre.
	The light button is not operating.	Contact the Authorised Service Centre.
Too much vibration.	The appliance is not supported properly.	Check if the appliance stands stable.
The appliance is noisy.	The appliance is not supported properly.	Check if the appliance stands stable.

Problem	Possible cause	Solution
Water flows on the rear plate of the appliance.	During the automatic defrosting process, frost melts on the rear plate.	This is correct.
Water flows inside the wine cabinet.	The appliance drain is clogged.	Clean the appliance drain hole. Refer to the "Cleaning the drain" section.
Water flows inside the wine cabinet.	Products prevent that water flows into the water collector.	Make sure that products do not touch the rear plate.
The temperature in the wine cabinet is too low or too high.	The temperature regulator is not set correctly.	Set a higher or lower temperature.
	The door is not closed correctly.	Refer to the "Closing the door" section.

ⓘ

If the advice does not lead to the desired result, call the nearest Authorised Service Centre.

9.2 Replacing the lamp


The appliance is equipped with a longlife LED interior light.

Only service is allowed to replace the lighting device. Contact your Authorised Service Centre.

9.3 Closing the door

1. Clean the door gaskets.
2. If necessary, adjust the door. Refer to the "Installation" chapter.
3. If necessary, replace the defective door gaskets. Contact the Authorised Service Centre.

10. NOISES

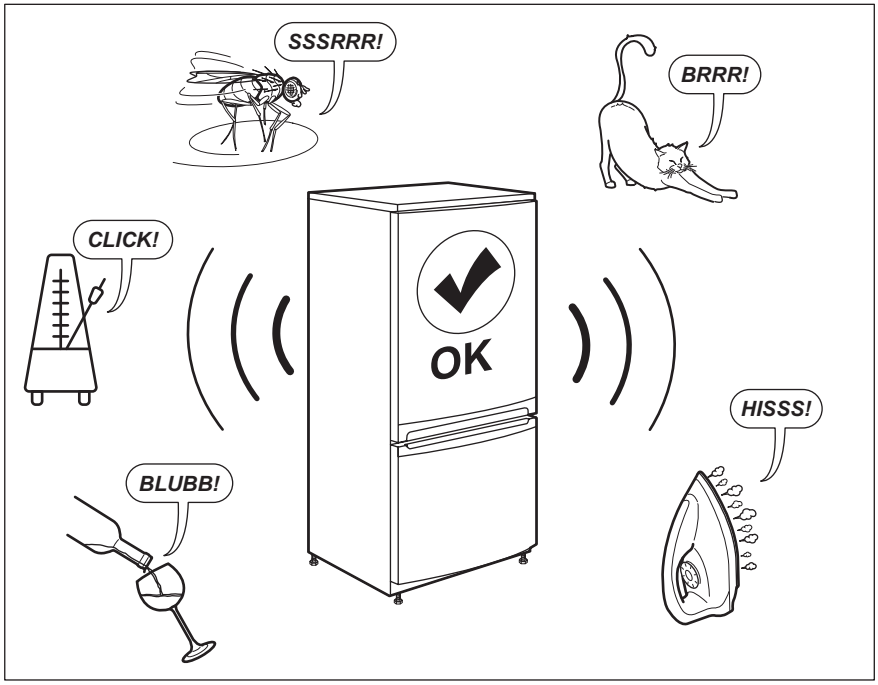

11. TECHNICAL DATA

The technical information is situated in the rating plate on the internal side of the appliance and on the energy label.

The QR code on the energy label supplied with the appliance provides a web link to the information related to the performance of the appliance in the EU EPREL database. Keep the energy label for reference together with the user manual and all other documents provided with this appliance.

It is also possible to find the same information in EPREL using the link *https://eprel.ec.europa.eu* and the model name and product number that you find on the rating plate of the appliance.

See the link *www.theenergylabel.eu* for detailed information about the energy label.

12. INFORMATION FOR TEST INSTITUTES

Installation and preparation of the appliance for any EcoDesign verification shall be compliant with EN 62552. Ventilation requirements, recess dimensions and minimum rear clearances shall be as stated in this User Manual at Chapter 3. Please contact the manufacturer for any other further information, including loading plans.

13. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

Velkomin(n) til AEG! Þakka þér fyrir að velja heimilistækið okkar.

Fáðu notkunarleiðbeiningar, bæklinga, bilanaleit, þjónustu- og viðgerðarupplýsingar:
www.aeg.com/support

Með fyrirvara á breytingum.

EFNISYFIRLIT

1. ÖRYGGISUPPLÝSINGAR..... 19
2. ÖRYGGISLEIÐBEININGAR..... 21
3. UPPSETNING..... 23
4. VÖRULÝSING..... 25
5. NOTKUN..... 25
6. DAGLEG NOTKUN..... 28
7. ÁBENDINGAR OG GÓÐ RÁÐ..... 30
8. UMHIRÐA OG HREINSUN..... 30
9. BILANALEIT..... 32
10. HÁVAÐI..... 33
11. TÆKNIGÖGN..... 34
12. UPPLÝSINGAR FYRIR PRÓFUNARSTOFNANIR..... 34
13. UMHVERFISMÁL..... 34

1. ⚠ ÖRYGGISUPPLÝSINGAR

Fyrir uppsetningu og notkun heimilistækisins skal lesa meðfylgjandi leiðbeiningar vandlega. Framleiðandinn ber ekki ábyrgð á neinum meiðslum eða skemmdum sem leiða af rangri uppsetningu eða notkun. Geymdu alltaf leiðbeiningarnar á öruggum stað þar sem auðvelt er að nálgast þær til síðari notkunar.

1.1 Öryggi barna og viðkvæmra einstaklinga

- Börn, 8 ára og eldri og fólk með minnkaða líkamlega-, skyn- eða andlega getu, eða sem skortir reynslu og þekkingu, mega nota þetta tæki, ef þau eru undir eftirliti eða hafa verið veittar leiðbeiningar varðandi örugga notkun tækisins og ef þau skilja hættuna sem því fylgir.
- Börn á aldrinum 3 til 8 ára er leyfilegt að setja í og taka úr heimilistækinu, að því tilskildu að þau hafi fengið almennilegar leiðbeiningar.

- Fólk með miklar og flóknar fatlanir má nota þetta heimilistæki, að því tilskildu að þau hafi fengið almennilegar leiðbeiningar.
- Halda ætti börnum yngri en 3 ára frá heimilistækinu nema þau séu undir stöðugu eftirliti.
- Hafa ætti eftirlit með börnum til að tryggja að þau leiki sér ekki með heimilistækið.
- Börn eiga ekki að hreinsa eða framkvæma notandaviðhald á heimilistækinu án eftirlits.
- Haltu öllum umbúðum frá börnum og fargaðu þeim á viðeigandi hátt.

1.2 Almennt öryggi

- Þetta heimilistæki er eingöngu ætlað fyrir geymslu á víni.
- Þetta heimilistæki er hannað til notkunar innanhúss á heimilum.
- Þetta heimilistæki má nota á skrifstofum, í herbergjum hótela, herbergjum gestahúsa, bændagistingum og öðrum sambærilegum gistirýmum þar sem notkun er ekki meiri en almenn heimilisnotkun.
- VIÐVÖRUN: Haltu loftræstingaropum, í afgirðingu heimilistækisins eða í innbyggðu rými, lausu við hindranir.
- VIÐVÖRUN: Notaðu ekki vélrænan búnað eða aðrar aðferðir til að hraða afísunarferli, annan en þann sem framleiðandinn mælir með.
- VIÐVÖRUN: Skemmdu ekki kælimiðilsrásina.
- VIÐVÖRUN: Notaðu ekki rafmagnstæki inni í geymsluhólfum matvæla í heimilistækinu, nema þau séu af þeirri tegund sem framleiðandinn mælir með.
- Notaðu ekki vatnsúða og gufu til að hreinsa heimilistækið.
- Hreinsaðu heimilistækið með mjúkum rökum klút. Notaðu aðeins hlutlaus þvottaefni. Notaðu ekki neinar vörur með svarfefnum, stálull, leysiefni eða málmhluti.
- Þegar heimilistækið er tómt um lengri tíma skal slökkva á því, afísa, hreinsa, þurrka og skilja hurðina eftir opna til að koma í veg fyrir að mygla myndist inni í tækinu.

- Geymdu ekki sprengifim efni eins og úðabrúsa með eldfimu drifefni í þessu heimilistæki.
- Ef rafmagnssnúran er skemmd verður framleiðandi, viðurkennd þjónustumiðstöð, eða svipað hæfur aðili að endurnýja hana til að forðast hættu.

2. ÖRYGGISLEIÐBEININGAR

2.1 Uppsetning

> ⚠ **AÐVÖRUN!**
>
> Einungis löggildur aðili má setja upp þetta heimilistæki.

- Fjarlægðu allar umbúðir.
- Ekki setja upp eða nota skemmt heimilistæki.
- Notaðu ekki heimilistækið áður en þú setur upp innbyggða virkið af öryggisástæðum.
- Fylgdu leiðbeiningum um uppsetningu sem fylgja með heimilistækinu.
- Alltaf skal sýna aðgát þegar heimilistækið er fært vegna þess að það er þungt. Notaðu alltaf öryggishanska og lokaðan skóbúnað.
- Gakktu úr skugga um að að loft geti flætt í kringum heimilistækið.
- Við fyrstu uppsetningu eða eftir að hurðinni hefur verið snúið skal bíða í að minnsta kosti 4 klukkustundir áður en heimilistækið er tengt við rafmagn. Þetta er til að olían nái að flæða aftur í þjöppuna.
- Áður en þú framkvæmir einhverjar aðgerðir á heimilistækinu (t.d. snýrð við hurðinni) skaltu taka klóna úr rafmagnsinnstungunni.
- Ekki setja heimilistækið upp nálægt hitagjöfum (ofnum) eða eldavélum, bökunarofnum eða helluborðum, nema annað sé tekið fram í leiðbeiningum um uppsetningu.
- Ekki hafa heimilistækið berskjaldað gagnvart rigningu.
- Ekki setja heimilistækið upp þar sem það verður fyrir beinu sólarljósi.
- Ekki setja þetta heimilistæki upp á svæðum þar sem er of mikill raki eða of kalt.
- Þegar þú færir til heimilistækið, skaltu lyfta brúninni að framan til að koma í veg fyrir að þú rispir gólfið.

2.2 Tenging við rafmagn

> ⚠ **AÐVÖRUN!**
>
> Hætta á eldi og raflosti.

> ⚠ **AÐVÖRUN!**
>
> Þegar heimilistækið er staðsett skaltu tryggja að rafmagnssnúran sé hvorki klemmd né skemmd.

> ⚠ **AÐVÖRUN!**
>
> Notaðu ekki fjöltengi eða framlengingarsnúrur.

- Heimilistækið verður að vera jarðtengt.
- Gakktu úr skugga um að færibreyturnar á merkiplötunni séu samhæfar við rafmagnsflokkun aðalæðar aflgjafa.
- Notaðu alltaf rétt ísetta innstungu sem ekki veldur raflosti.
- Gættu þess að valda ekki skaða á rafmagnsíhlutum (t.d. rafmagnskló, rafmagnssnúru, þjöppu). Hafðu samband við viðurkennda þjónustumiðstöð eða rafvirkja til þess að skipta um rafmagnsíhluti.
- Rafmagnssnúran þarf að vera fyrir neðan rafmagnsklóna.
- Aðeins skal tengja rafmagnsklóna við rafmagnsinnstunguna í lok uppsetningarinnar. Gakktu úr skugga um að rafmagnsklóin sé aðgengileg eftir uppsetningu.
- Ekki toga í snúruna til að taka tækið úr sambandi. Taktu alltaf um klóna.

2.3 Notkun

⚠ AÐVÖRUN!

Hætta á meiðslum, bruna, raflosti eða eldsvoða.

 Heimilistækið inniheldur eldfimt gas, ísóbútan (R600a), náttúrulegt gas, sem er mjög umhverfisvænt. Gættu þess að valda ekki skaða á kælirásinni sem inniheldur ísóbútan.

- Breytið ekki eiginleikum heimilistækisins.
- Það er harðbannað að nota þessa innbyggðu vöru sem frístandandi tæki.
- Ekki láta rafmagnstæki (s.s. ísgerðarvélar) í tækið nema það sé tekið fram af framleiðanda að þau þoli það.
- Ef rafrásir kælibúnaðarins skemmast skal gæta þess að það sé enginn logi eða kveikjugjafar í herberginu. Loftræstu herbergið.
- Ekki láta heita hluti snerta þá hluta heimilistækisins sem eru úr plasti.
- Ekki nota heimilistækið til að geyma eldfimar lofttegundir eða vökva.
- Setjið ekki eldfim efni eða hluti bleytta með eldfimum efnum í, nálægt, eða á heimilistækið.
- Ekki snerta þjöppuna eða þéttinn. Þau eru heit.

2.4 Innri lýsing

⚠ AÐVÖRUN!

Hætta á raflosti.

- Þessi vara inniheldur einn eða fleiri ljósgjafa í orkunýtniflokknum E.
- Varðandi ljósin inn í þessari vöru og ljós sem varahluti sem seld eru sérstaklega: Þessi ljós eru ætluð að standast öfgakenndar aðstæður í heimilistækjum eins og hitastig, titring, raka eða til að senda upplýsingar um rekstrarstöðu tækisins. Þau eru ekki ætluð til að nota í öðrum tækjum og henta ekki sem lýsing í herbergjum heimila.

2.5 Umhirða og þrif

⚠ AÐVÖRUN!

Hætta á meiðslum eða skemmdum á heimilistækinu.

- Áður en viðhald fer fram á tækinu skal slökkva á því og aftengja aðalklóna frá rafmagnsinnstungunni.
- Þetta tæki inniheldur kolvatnsefni í kælieiningunni. Aðeins hæfir aðilar mega sinna viðhaldi og endurhleðslu á einingunni.
- Skoðið frárennsli tækisins reglulega og hreinsið það ef þörf krefur. Ef frárennslið er stíflað mun affryst vatn safnast fyrir í botni heimilistækisins.

2.6 Þjónusta

- Hafðu samband við viðurkennda þjónustumiðstöð til að gera við heimilistækið. Notaðu eingöngu upprunalega varahluti.
- Vinsamlegast athugaðu að ef þú eða einhver sem ekki er fagmaður gerir við getur það haft afleiðingar varðandi öryggi og gæti ógilt ábyrgðina.
- Eftirfarandi varahlutir verða fáanlegir í 7 ár eftir að hætt hefur verið framleiðslu gerðarinnar: Hitastillar, hitaskynjarar, prentplötur, ljósgjafar, hurðahandföng, hurðalamir, bakkar og grindur. Vinsamlegast athugaðu að suma þessara varahluta geta aðeins atvinnuviðgerðaraðilar fengið og ekki eru allir varahlutir viðeigandi fyrir allar gerðir.
- Hurðaþéttingar verða fáanlegar í 10 ár eftir að hætt hefur verið framleiðslu gerðarinnar.

2.7 Förgun

⚠ AÐVÖRUN!

Hætta á meiðslum eða köfnun.

- Aftengið heimilistækið frá rafmagnsgjafanum.
- Klippa rafmagnssnúruna af og fleygið henni.
- Fjarlægið hurðina til að koma í veg fyrir að börn eða dýr geti lokast inni í tækinu.


- Kælirásin og einangrunarefnið á tækinu eru ósónvæn.
- Einangrunarfroðan inniheldur eldfimar lofttegundir. Hafið samband við sveitarfélagið til að fá upplýsingar um hvernig á að farga heimilistækinu á réttan hátt.
- Ekki valda skaða á hluta kælieiningarinnar sem er nálægt hitaskiptinum.


3. UPPSETNING

⚠ AÐVÖRUN!

Sjá kafla um öryggismál.

3.1 Mál

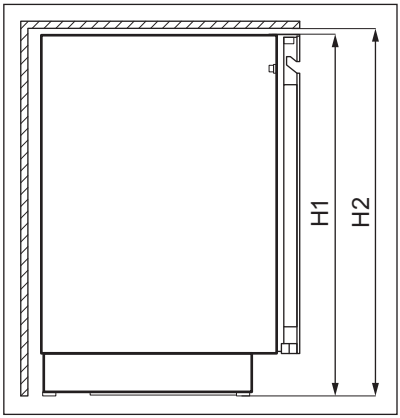

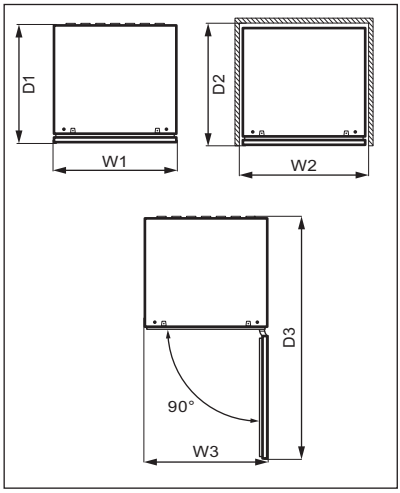

Heildarmál [1]		
H1	mm	818
W1	mm	595
D1	mm	577

[1] hæð, breidd og dýpt heimilistækisins án handfangs

Svæði sem þarf til notkunar [2]		
H2	mm	820
W2	mm	600
D2	mm	580

[2] hæð, breidd og dýpt heimilistækisins ásamt handfangi, auk rýmisins sem þarf til að tryggja rétt loftflæði fyrir kæliloft

Heildarsvæði sem þarf til notkunar [3]		
H2	mm	820
W3	mm	600
D3	mm	1162

[3] hæð, breidd og dýpt heimilistækisins ásamt handfangi, auk rýmisins sem þarf til að tryggja rétt loftflæði fyrir kæliloft, auk svæðisins sem nauðsynlegt er svo að hurðin geti opnast við lágmarkshorn sem nauðsynlegt er til að fjarlægja allan innri búnað

3.2 Staðsetning

Til að tryggja rétta virkni heimilistækisins skaltu ekki að setja það upp nálægt hitagjöfum (bakaraofnum, eldavélum, hitaofnum, hellum, háfum, helluborðum eða gufugleypum) eða á stað sem verður fyrir beinu sólarljósi. Gakktu úr skugga um að loftflæði sé gott aftan við skápinn.

Tækið á að setja upp á þurrum, vel loftræstum stað innandyra.

Þetta tæki er ætlað til notkunar við umhverfishita á bilinu 10°C til 38°C.

ⓘ

Eingöngu er hægt að ábyrgjast rétta virkni heimilistækisins sé það notað á þessu hitabili.

ⓘ

Ef þú hefur einhverjar efasemdir varðandi uppsetningu heimilistækisins, skaltu vinsamlegast ráðfæra þig við seljanda, þjónustuverið okkar eða næstu viðurkenndu þjónustumiðstöð.

ⓘ

Það verður að vera hægt að taka heimilistækið úr sambandi við rafmagn. Innstungan verður því að vera aðgengileg eftir uppsetningu.

3.3 Rafmagnstenging

- Áður en stungið er í samband, þarf að ganga úr skugga um að sú spenna og tíðni sem sýnd eru á merkiplötunna samræmist heimilisrafmagninu.
- Heimilistækið verður að vera jarðtengt. Kló rafmangssnúrunnar er með snertu sem er ætluð til þess. Ef innstungan á heimilinu er ekki jarðtengd, þarf að jarðtengja heimilistækið í aðskilda jörð til að uppfylla núgildandi reglugerðir. Hafið samband við fagmenntaðan rafvirkja.
- Framleiðandi hafnar allri ábyrgð ef ofangreindum öryggisráðstöfunum er ekki fylgt.
- Þetta heimilistæki samræmist EBE tilskipunum.

3.4 Hallajöfnun

Þegar heimilistækinu er komið fyrir skal tryggja að það standi lárétt. Þessu er hægt að ná með því að stilla fæturnar tvær neðan á tækinu að framan.

3.5 Viðsnúningur hurðar


Vinsamlegast skoðaðu sérstakt skjal með leiðbeiningum um uppsetningu og viðsnúning hurðar.

⚠ **VARÚÐ!**

Við hvert þrep í viðsnúningi hurðar skal gæta þess að verja gólfið gegn rispum, með slitsterku efni.

4. VÖRULÝSING

4.1 Vöruyfirlit

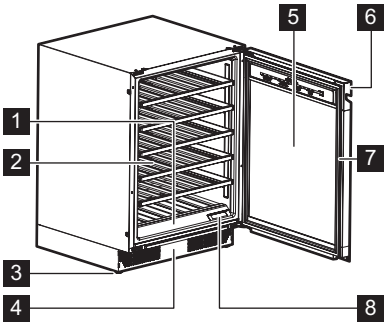


1. Stjórnborð
2. Hilla
3. Fótur
4. Rammaskreyting
5. Þrefaldur glans á glerhurð
6. Handfang
7. Pakkning
8. Loftsía

5. NOTKUN

⚠ AÐVÖRUN!


Látið ekki vökva sullast á stjórnborðið. Þetta kann að valda skemmdum á búnaði og auka líkurnar á raflosti.

5.1 Stjórnborð

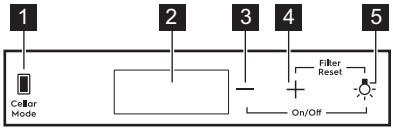

1. Hnappur fyrir kjallarageymslustillingu
2. Skjár
3. Hnappur til að lækka hitastig
4. Hnappur til að hækka hitastig
5. Ljósahnappur

5.2 Skjár

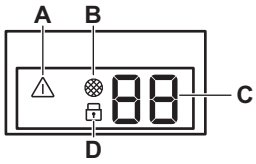

A. Aðvörunarvísir
B. Vísir fyrir endurstillingu síu
C. Vísir fyrir hitastig
D. Vísir fyrir barnalæsingu

5.3 Kveikt og slökkt

Til að kveikja á heimilistækinu:

1. Stingið klónni í samband við rafmangsinnstungu á vegg.
2. Ef slökkt er á skjánum skaltu pikka á og halda inni **hnappi til að lækka hitastig fyrir** og **ljósahnappinn** í 3 sekúndur.

Skjárinn sýnir sjálfgefið innstillt hitastig 12°C.

Til að slökkva á tækinu skaltu endurtaka skref 2 og taka klóna úr innstungunni.

Til að velja annað innstillt hitastig, sjá hlutann „Hitastilling“.

5.4 Hitastilling

ⓘ

Sjálfgefið innstillt hitastig fyrir vínskápinn er 12°C.

ⓘ

Hægt er að stilla hitastigið á milli +5 og +20°C.

Til að stilla hitastig skaltu pikka á hnappinn til að hækka eða lækka hitastig fyrir hólfið:

- Fyrsta bank sýnir núverandi innstillt hitastig.
- Annað bank hækkar eða lækkar hitastigið um eina gráðu.
- Til að flýta fyrir valinu skaltu pikka á og halda inni hnappnum til að hækka eða lækka hitastig þar til þú nærð viðeigandi hitastigi.

ⓘ

Hitastigstölurnar sýna núverandi hitastig sjálfgefið. Þegar þú pikkar einu sinni eða byrjar að velja nýja stillingu, blikka tölurnar sem sýndar eru. Eftir 3 sekúndur án þess að pikka á hnappana, hætta tölurnar að blikka og núverandi hitastig birtist.

Til að stilla rétt hitastig fyrir hverja tegund af víni, sjá kaflann „Dagleg notkun".

5.5 Uppsetning ljósa

Pikkaðu einu sinni á ljósahnappinn til að kveikja eða slökkva á ljósinu. Sjálfgefin ljósastilling er **1A** fyrir ljósbreytni og **9L** fyrir birtustig ljóssins.

ⓘ

Ljósið hefur engin neikvæð áhrif á gæði víns.

Þú getur stillt breytni og birtustig ljóssins.

Að stilla ljósbreytni eða birtustig:

1. Pikkaðu og haltu inni ljósahnappnum í 3 sekúndur til að fara í valmyndina fyrir ljósastillingar.
2. Ljósbreytni **A** birtist. Pikkaðu aftur á ljósahnappinn til að fara í birtustig ljóssins **L**.
3. Pikkaðu endurtekið á hitastigsstillana til að stilla æskilega ljósbreytni eða birtustig.

Ljósbreytni (**A**):

- **1A** opin hurð - ljós kveikt á hæsta dimmustigi, hurð lokuð - ljósin slökkva,
- **2A** opin hurð - ljós kveikt á hæsta dimmustigi, hurð lokuð - ljós kveikt á völdu dimmustigi,
- **3A** opin og lokuð hurð - ljós kveikt á völdu dimmustigi,
- **4A** opin hurð - ljós kveikt á völdu dimmustigi, hurð lokuð - ljós kveikt á hæsta dimmustigi.

Birtustig (**L**):

- **9L** er bjartasta stillingin á meðan **1L** er dimmasta stillingin.

5.6 Cellaring

Í þessari stillingu skiptir heimilistækið yfir í forstillt sjálfgefið hitastig sem er 12°C.

Pikkaðu á Cellar Mode hnappinn til að virkja Cellaring stillinguna. **CE** á skjánum byrjar að blikka. Bíddu í 5 sekúndur. Stillingin er virk þegar **CE** hættir að blikka og lýsir á hálft birtustig.

Pikkaðu einu sinni á Cellar Mode til að virkja Cellaring stillinguna. Þegar Cellaring stillingunni er afvirkjuð fer hitastigið aftur í fyrri stillingu.

5.7 Child Lock hamur

Virkjaðu Child Lock aðgerðina til að læsa hnöppunum gegn óviljandi notkun.

Pikkaðu og haltu inni Cellar Mode hnappnum í 3 sekúndur til að virkja Child Lock. Þegar stillingin er á kviknar lásavísirinn í bjartasta birtustigið. Eftir 3 sekúndur dimmist lásavísirinn í hálft birtustig.

ⓘ

Ef þú ýtir á einhvern annan hnapp en Cellar Mode blikkar lásavísirinn þrisvar sinnum.

Til að afvirkja Child Lock stillinguna skaltu pikka aftur á samsvarandi hnapp.

ⓘ

Child Lock stillingin afvirkjast eftir rafmagnstruflun eða þegar tækið er tekið úr sambandi.

5.8 Endurstilla loftsíuna

Endurstilling á viðvörun fyrir loftsíu:

1. Skiptu um kolefnisloftsíu. Sjá „Skipt um loftsíuna“ hlutann.
2. Pikkaðu og haltu samtímis inni hnöppum til að hækka hitastig og auka ljós í 5 sekúndur.
3. Vísinn fyrir síu slokknar næstu 6 mánuðina.

ⓘ

Eftir 6 mánuði sýnir skjárinn vísinn fyrir síu til að minna þig á að skipta um síu.

5.9 Dempa eða kveikja aftur á hljóði

Hljóðin eru sjálfkrafa virkjuð.

Að dempa eða kveikja aftur á hljóði:

1. Pikkaðu og haltu samtímis inni Cellar Mode og hnöppum til að hækka hitastig í 5 sekúndur.
2. Skjárinn sýnir **Of** í 2 sekúndur þegar hljóð eru dempað eða **On** í 2 sekúndur þegar kveikt er aftur á hljóði.

5.10 Breyting á hitaeiningum

Að breyta hitaeiningunum á milli °C og °F:

1. Pikkaðu samtímis á hnappana Cellar Mode og Lækkað hitastig.
2. Þegar þú hefur stillt æskilegu einingunna þína þá blikkar **°C** eða **°F** á skjánum í 5 sekúndur.

5.11 Demo hamur

Virkjaðu Demo stillinguna til að sýna eiginleika tækisins.

Pikkaðu og haltu samtímis inni hnöppunum Ljós og Cellar Mode í 10 sekúndur til að virkja Demo stillinguna.

Þegar kveikt hefur verið á stillingunni sýnir skjárinn til skiptis **dE** og **On** blikkandi til skiptis í 5 sekúndur.

Skilaboðin hér að ofan birtast á 5 mínútna fresti til að minna þig á að heimilistækið er í Demo stillingu.

Til að afvirkja Demo stillinguna skaltu endurtaka ofangreint ferli.

Þegar þú hefur afvirkjað stillinguna sýnir skjárinn **dE** og **Of** blikkandi til skiptis í 5 sekúndur.

5.12 Viðvörun fyrir háan og lágan hita

Aðvörun um háan hita

Viðvörunin virkjast þegar hitastig hólfsins er 5°C hærra en innstillt hitastig í meira en 60 mínútur.

Á meðan viðvörun er í gangi:

- skjárinn sýnir **Hº**
- viðvörunarvísirinn leiftrar

Viðvörun um lágan hita

Viðvörunin virkjast þegar hitastig hólfsins er 2°C lægra en innstillt hitastig í meira en 60 mínútur.

Á meðan viðvörun er í gangi:

- skjárinn sýnir **Lº**
- viðvörunarvísirinn leiftrar

Ýttu á hvaða hnapp sem er á stjórnborðinu til að slökkva á viðvöruninni.

- Þegar heimilistækið fer aftur í innstillt hitastig fer venjulegur skjár í fyrra horf. Athugaðu hvort vínið sem er inni í heimilistækinu hafi nokkuð skemmst.
- Ef hitastigið er enn of hátt eða of lágt virkjast viðvörunin aftur eftir 60 mínútur.

ⓘ

Viðvörunin virkjast ekki innan við fyrstu 90 mínúturnar eftir að kveikt er á heimilistækinu.

5.13 Aðvörun fyrir opna hurð

Ef hurðin er skilin eftir opin í um það bil 5 mínútur byrja ljósin að blikka og skjárinn sýnir til skiptis **dr** og **OP** Eftir 2 mínútur í viðbót er hljóðið komið á.

Viðvörunin hættir eftir að hurðinni er lokað eða eftir að ýtt hefur verið á einhvern hnapp á stjórnborðinu.

ⓘ

Viðvörunin byrjar aftur að hringja eftir 5 mínútur ef hurðin er enn opin.

6. DAGLEG NOTKUN

6.1 Víngeymsla

ⓘ

Þetta heimilistæki er eingöngu ætlað til að geyma í vín.


Geymslutími á víni fer eftir aldri, áfengismagni, tegund þrúganna og glúkósa- og barksýrumagni. Þegar þú kaupir vínið skaltu athuga hvort vínið sé búið að eldast eða hvort það muni batna með tímanum.

Ráðlagt hitastig geymslu:


- Fyrir kampavín og freyðivín, milli +6°C og +8°C.
- Fyrir hvítvín, milli +10°C og +12°C.
- Fyrir rósavín og létt rauðvín, milli +12°C og +16°C.
- Fyrir eldri rauðvín, milli +14°C og +18°C.

Heimilistækið er hannað til að geyma allt að 40 Bordeaux vínflöskur (0,75 l) með því að setja:

- 5 flöskur á þrepi 1,
- 7 flöskur á þrepum 2 - 6,
- Geymsluþrep

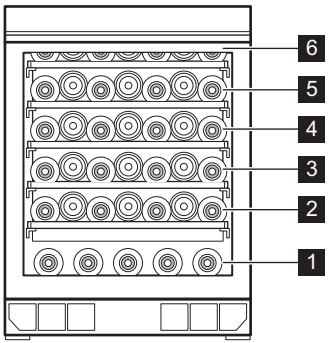

Full hilla á þrepum 2 - 6

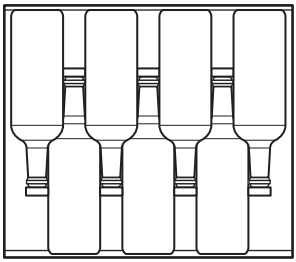


6.2 Að fjarlægja og setja upp hillur

Hillur fjarlægðar

Til að fjarlægja hilluna:


1. Opnaðu hurð vínskápsins alla leið.
2. Dragðu hilluna út.
3. Gríptu í miðjuhilluna, lyftu henni aðeins upp og taktu hana úr vínskápnum.

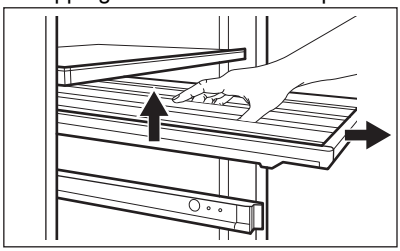


Setja hillurnar í skápinn

Til að setja hillurnar aftur á upprunalegan stað:


1. Dragðu renniteina hillunnar út alla leið.
2. Settu aftari festingar hillunnar á renniteinana þannig að þær grípi báðum megin.

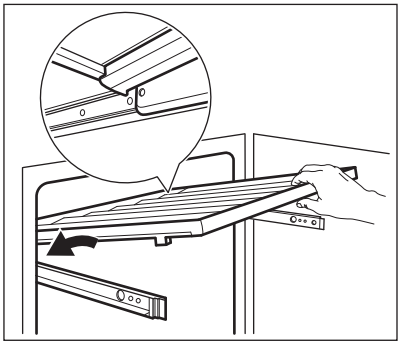

3. Aðlagaðu leiðarana að framan.

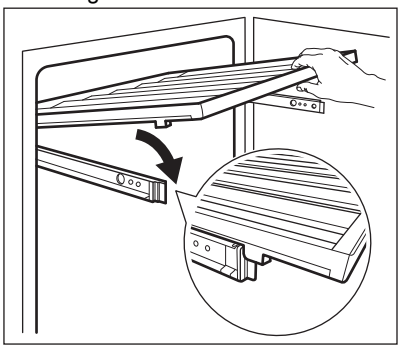


4. Ýttu aftari hluta hillunnar þétt niður til að ganga úr skugga um að hún sé sett og grípi rétt á teinunum og ýttu henni aftur inn í heimilistækið.

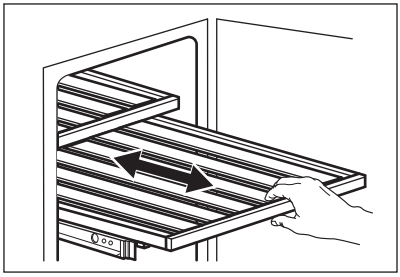

⚠ VARÚÐ!

Áður en vínflöskur eru settar á hillurnar skaltu ganga úr skugga um að þær grípi rétt á renniteinunum.

Athugaðu mögulega ranga hillustaðsetningu:

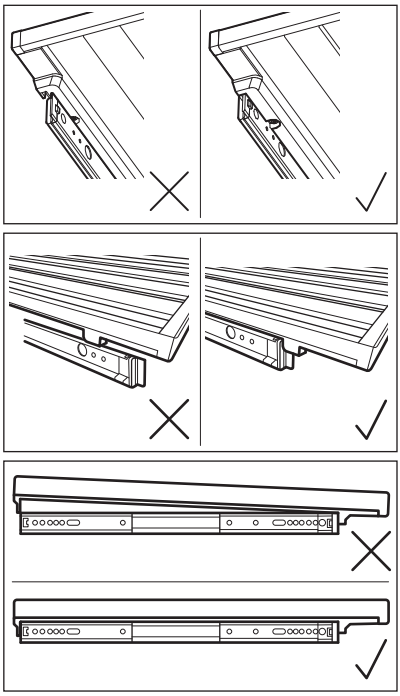


Notaðu viðarhillurnar eingöngu til að geyma flöskur.

6.3 Skipt um loftsíuna

Heimilistækið þitt er útbúið kolefnissíu sem er staðsett við hlið stjórnborðsins. Sjá kaflann „Vörulýsing“.

Sían hreinsar óæskilega lykt úr vínskápnum sem bætir geymslugæðin.
Að skipta um loftsíu:

1. Finndu síuna og taktu hana úr heimilistækinu. Fjarlægðu síuhlífina.
2. Fjarlægðu gömlu síuna.
3. Taktu nýju síuna úr plastpokanum.
4. Settu nýju síuna í og tryggðu að hliðin með textanum snúi upp.

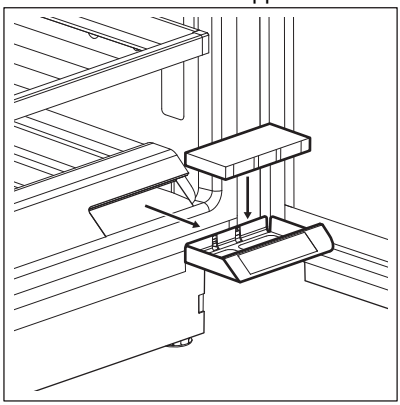

5. Settu síuhlífina aftur á og settu hana aftur í heimilistækið.
6. Farðu á stjórnborðið og endurstilltu síuna til að afvirkja viðvörunina. Sjá „Endurstilla loftsíuna“ hlutann.

Til að ná sem bestri frammistöðu, ætti að skipta um síuna á sex mánaða fresti. Nýjar virkar síur er hægt að versla hjá söluaðila á staðnum í gegnum vefsíðuna. Vörunúmerið er prentað á plastpokann.

7. ÁBENDINGAR OG GÓÐ RÁÐ

7.1 Ábendingar um orkusparnað

- Innri uppsetning heimilistækisins er það sem tryggir skilvirkustu notkun orku.
- Ekki opna hurðina oft eða hafa hana opna lengur en nauðsyn krefur.
- Tryggðu gott loftflæði. Ekki hylja loftræstiristarnar eða götin.

8. UMHIRÐA OG HREINSUN

⚠ AÐVÖRUN!

Sjá kafla um öryggismál.

8.1 Almennar viðvaranir

⚠ VARÚÐ!

Takið heimilistækið úr sambandi áður en það gengst undir viðhald.

ⓘ

Í kælieiningu þessa heimilistækis eru vetniskolefni; því mega aðeins löggildir tæknimenn framkvæma viðhald og endurhleðslu á því.

ⓘ

Aukahluti og íhluti heimilistækisins er ekki hægt að þvo í uppþvottavél.

8.2 Innra byrði hreinsað

Áður en heimilistækið er notað í fyrsta sinn, skal þvo innri og alla innri fylgihluti með volgu vatni og hlutlausri sápu til að losna við dæmigerða lykt af nýrri vöru og þurrka svo vandlega.

⚠ VARÚÐ!

Ekki nota þvottaefni, slípiduft, klór eða olíublönduð hreinsiefni, þar sem það skemmir áferðina.

8.3 Reglubundin hreinsun


Hreinsa þarf búnaðinn reglulega:

1. Hreinsaðu innra yfirborðið með volgri matarsódalausn. Lausnin ætti að vera u.þ.b. 2 matskeiðar af matarsóda fyrir hvern lítra af vatni.
2. Kreistu umframvatn úr svampinum eða klútnum þegar stjórnborðið eða rafmagnshlutar eru hreinsaðir.
3. Hreinsaðu heimilistækið að utan með volgu vatni og örlítilli mildri sápu.
4. Skoðaðu hurðarþéttingar reglulega og strjúktu af þeim svo þær séu hreinar og lausar við óhreinindi.
5. Skolaðu og þurrkaðu vandlega.

8.4 Tæming hreinsuð

Hreinsaðu afrennslisopið reglulega til að koma í veg fyrir að vatn flæði yfir og drjúpi á flöskurnar sem eru í geymslu. Afrennslisopið er staðsett á bakhliðinni neðarlega vinstra megin á heimilistækinu.

Áður en hreinsun hefst skaltu fjarlægja neðstu tvær hillurnar. Til að komast auðveldlega að afrennslinu skaltu ýta aðeins á hlífðarrimlagrindina. Notaðu milt hreinsunarefni fyrir slöngur til að hreinsa.

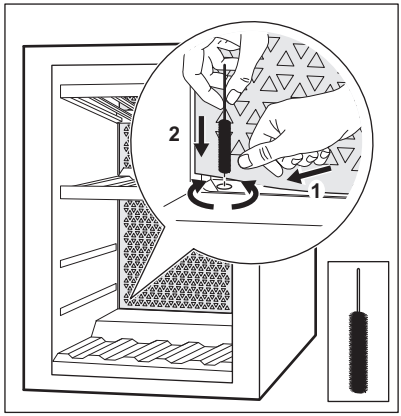

ⓘ

Sjá kaflann „Að fjarlægja og setja upp hillur" til að fá leiðbeiningar um hvernig á að fjarlægja og setja upp hillurnar.

8.5 Tímabil án notkunar

Þegar heimilistækið er ekki í notkun til lengri tíma, skal grípa til eftirfarandi ráðstafana:

1. Aftengja tækið frá rafmagni.
2. Fjarlægðu alla hluti.
3. Hreinsa heimilistækið og alla aukahluti þess.
4. Hafa skal hurðina opna til að koma í veg fyrir vonda lykt.

Þegar heimilistækið er ekki í notkun vegna rafmagnsleysis:

- Rafmagni er yfirleitt komið aftur á innan nokkurra klukkustunda og hefur ekki áhrif á hitastig heimilistækisins ef þú lágmarkar að opna hurðina.
- Ef rafmagnið kemst ekki aftur á í langan tíma þarftu að gera viðeigandi ráðstafanir sem lýst er hér að ofan.

9. BILANALEIT

⚠ AÐVÖRUN!
Sjá kafla um öryggismál.

9.1 Hvað skal gera ef…

Vandamál	Möguleg ástæða	Lausn
Heimilistækið virkar ekki.	Slökkt er á heimilistækinu.	Kveiktu á heimilistækinu.
	Rafmagnsklóin er ekki rétt tengd við rafmagnsinnstunguna.	Tengdu klóna við rafmagnsinnstunguna með réttum hætti.
	Það er ekkert rafmagn á rafmagnsinnstungunni.	Tengdu annað raftæki við rafmagnsinnstunguna til að athuga hvort rafmagn er í til staðar. Ef ekki, skaltu hafa samband við faglærðan rafvirkja.
	Aflrofanum sló út eða rafmagnsöryggi er sprungið.	Sláðu inn aflrofanum eða skiptu um rafmagnsöryggið.
Þjappan gengur samfellt.	Hitastig er rangt stillt.	Sjá kaflann „Notkun“.
	Stofuhitinn er of hár.	Sjá kaflann „Uppsetning“.
	Hurðin hefur verið opnuð of oft.	Ekki hafa hurðina opna lengur en nauðsynlegt er.
	Hurðin er ekki nægilega vel lokuð.	Sjá „Hurðinni lokað“ hlutann.
Ljósið virkar ekki.	Ljósið er slökkt.	Kveiktu á ljósinu. Sjá „Uppsetning ljósa“ hlutann.
	Heimilistækið er ekki í sambandi.	Tengdu heimilistækið.
	Aflrofanum sló út eða rafmagnsöryggi er sprungið.	Sláðu inn aflrofanum eða skiptu um rafmagnsöryggið.
	Ljósið er bilað.	Hafðu samband við viðurkennda þjónustumiðstöð.
	Ljósahnappurinn virkar ekki.	Hafðu samband við viðurkennda þjónustumiðstöð.
Of mikill titringur.	Heimilistækið er ekki með réttan stuðning.	Kannaðu hvort heimilistækið sé stöðugt.
Heimilistækið gefur frá sér mikinn hávaða.	Heimilistækið er ekki með réttan stuðning.	Kannaðu hvort heimilistækið sé stöðugt.
Vatnið flæðir á afturplötu heimilistækisins.	Á meðan á sjálfvirka affrystingarferlinu stendur, bræðir það frostið á afturplötunni.	Þetta er í lagi.
Vatnið flæðir inni í vínskápnum.	Afrennslið frá heimilistækinu er stíflað.	Hreinsaðu afrennslisop heimilistækisins. Sjá kaflann „Tæming hreinsuð".
Vatnið flæðir inni í vínskápnum.	Matvörur hindra að vatn renni í vatnssafnarann.	Gakktu úr skugga um að matvörurnar snerti ekki aftari plötuna.

Vandamál	Möguleg ástæða	Lausn
Hitastigið inni í vínskápnum er of lágt eða of hátt.	Hitastigsstillirinn er ekki rétt innstilltur.	Stilltu hitastigið hærra eða lægra.
	Hurðin er ekki nægilega vel lokuð.	Sjá „Hurðinni lokað“ hlutann.

ⓘ

Ef ráðið skilar ekki tilætluðum árangri skaltu hringja í næstu viðurkenndu þjónustumiðstöð.

9.2 Skipt um ljósið


Heimilistækið er búið ljósdíóðuljósi með langan endingartíma.

Aðeins viðgerðarþjónustuaðilar mega skipta um ljósabúnaðinn. Hafið samband við viðurkennda þjónustumiðstöð.

9.3 Hurðinni lokað

1. Þrífið þéttiborða hurðarinnar.
2. Stillið af hurðina ef nauðsynlegt er. Sjá kaflann „Uppsetning“.
3. Ef nauðsynlegt reynist, skal skipta um ónýta þéttiborða. Hafið samband við viðurkennda þjónustumiðstöð.

10. HÁVAÐI

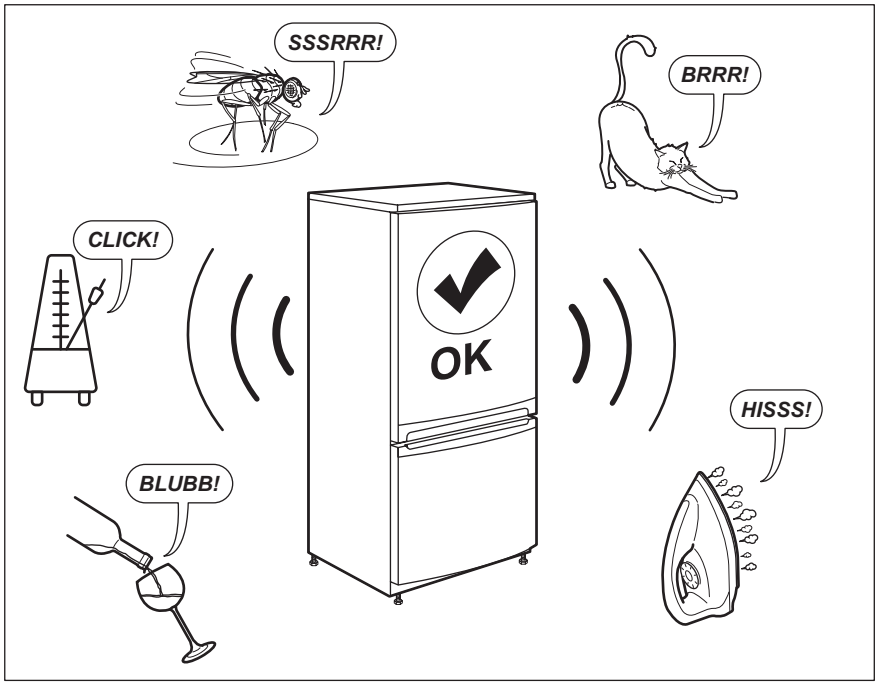

11. TÆKNIGÖGN

Tæknilegar upplýsingar eru á merkiplötunni, á ytri eða innri hlið heimilistækisins og á orkumerkimiðanum.

QR-kóðinn á orkumerkingunni sem fylgir þessu tæki, gefur upp tengil á vefsíðu varðandi upplýsingar um frammistöðu tækisins í gagnagrunni EU EPREL. Geymdu orkumerkimiðann til uppflettingar ásamt notandahandbókinni og öllum öðrum skjölum sem fylgja með þessu heimilistæki.

Það er einnig mögulegt að nálgast sömu upplýsingar í EPREL með því að nota tengilinn: *https://eprel.ec.europa.eu* og gerðarheiti og framleiðslunúmer sem finna má á merkiplötu heimilistækisins.

Skoðaðu tengilinn *www.theenergylabel.eu* varðandi ítarlegar upplýsingar um orkumerkingar.

12. UPPLÝSINGAR FYRIR PRÓFUNARSTOFNANIR

Uppsetning og undirbúningur heimilistækisins fyrir EcoDesign-vottun verður að samræmast EN 62552. Loftræstingarkröfur, stærðir skotsins og lágmarksbil að aftan verður að vera eins og tilgreint er í 3. kafla í þessari notandahandbók. Hafðu samband við framleiðanda fyrir allar frekari upplýsingar, þar með talið hleðsluáætlanir.

13. UMHVERFISMÁL

Endurvinna þarf öll efni merkt tákninu ♺. Setjið umbúðirnar í viðeigandi sorpílát til endurvinnslu. Leggið ykkar að mörkum til verndar umhverfinu og heilsu manna og dýra og endurvinnið rusl sem fylgir raftækjum og raftrænum búnaði. Hendið ekki heimilistækjum sem merkt eru með tákninu ⍁ í venjulegt heimilisrusl. Farið með vöruna í næstu endurvinnslustöð eða hafið samband við sveitarfélagið.

aeg.com

212003556-8121005-03

