

AEG


aeg.com/register

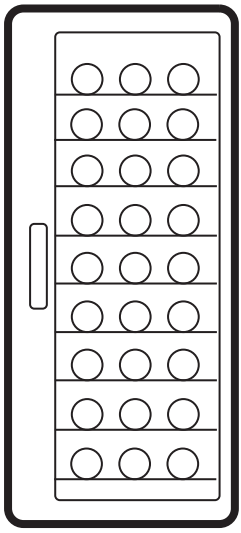


AWCD280B6B

INSTALLATION / UPPSETNING

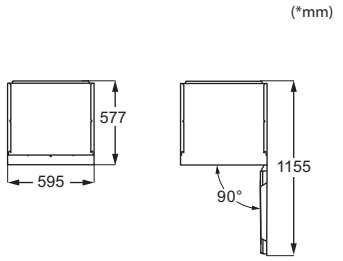

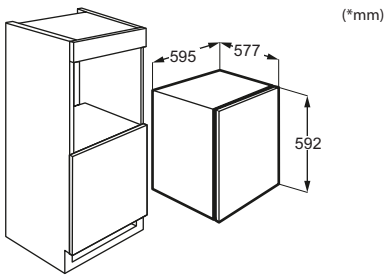

NOISES / HÁVAÐI

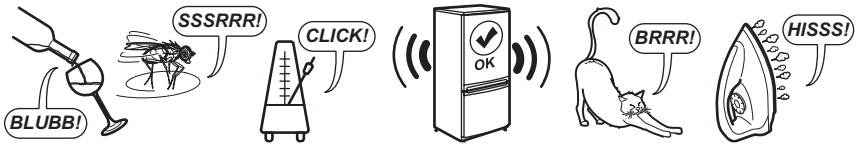

Subject to change without notice.

1. SAFETY INFORMATION..... **2**
2. SAFETY INSTRUCTIONS..... **4**
3. APPLIANCE POSITIONING.....**6**
4. CONTROL PANEL.....**6**
5. DAILY USE.....**7**
6. CARE AND CLEANING..... **8**
7. TROUBLESHOOTING..... **8**
8. TECHNICAL DATA..... **9**
9. INFORMATION FOR TEST INSTITUTES **9**
10. ENVIRONMENTAL CONCERNS.....**9**

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance read the supplied instructions carefully. The manufacturer is not responsible for any injuries or damage that result from incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children aged from 3 to 8 years and persons with very extensive and complex disabilities are allowed to load and unload the appliance provided that they have been properly instructed. Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Children should be supervised to ensure that they do not play with the appliance.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.
- Keep all packaging away from children and dispose of it appropriately.

1.2 General Safety

- This appliance is for storing wine only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in, offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: Do not damage the refrigerant circuit.
- WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- When the appliance is empty for long period, switch it off, defrost, clean, dry and leave the door open to prevent mould from developing within the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.

2. SAFETY INSTRUCTIONS

2.1 Installation

⚠ WARNING!
Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Do not use the appliance before installing it in the built-in structure due to safety manner.
- Follow the separate instructions for the appliance installation available on our website.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Make sure the air can circulate around the appliance.
- At first installation, wait at least 4 hours before connecting the appliance to the power supply. This is to allow the oil to flow back in the compressor.
- Before carrying out any operations on the appliance, remove the plug from the power socket.
- Do not install the appliance close to radiators or cookers, ovens, or hobs, unless otherwise specified in the installation instructions.
- Do not expose the appliance to the rain.
- Do not install the appliance where there is direct sunlight.
- Do not install this appliance in areas that are too humid or too cold.
- When you move the appliance, lift it by the front edge to avoid scratching the floor.

2.2 Electrical connection

⚠ WARNING!
Risk of fire and electric shock.

⚠ WARNING!
When positioning the appliance, ensure the supply cord is not trapped or damaged.

⚠ WARNING!
Do not use multi-plug adapters and extension cables.

- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- The appliance must be earthed.
- Always use a correctly installed shockproof socket.
- If the domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician.
- Make sure not to cause damage to the electrical components (e.g. mains plug,

mains cable, compressor). Contact the Authorised Service Centre or an electrician to change the electrical components.
- The mains cable must stay below the level of the mains plug.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not disconnect the appliance by pulling on the mains cable. Always pull on the mains plug.

2.3 Use

⚠ WARNING!
Risk of injury, burns, electric shock or fire.

 The appliance contains flammable gas, isobutane (R600a), a natural gas with a high level of environmental compatibility. Be careful not to cause damage to the refrigerant circuit containing isobutane.

- Do not change the specification of the appliance.
- Any use of the built-in product as free-standing is strictly prohibited.
- This appliance is intended to be used at ambient temperature ranging from 16°C to 38°C. The specified temperature range guarantees the correct operations of the appliance.
- Do not put electrical appliances (e.g. ice cream makers) in the appliance unless they are stated applicable by the manufacturer.
- If damage occurs to the refrigerant circuit, make sure that there are no flames and sources of ignition in the room. Ventilate the room.
- Do not let hot items to touch the plastic parts of the appliance.
- Do not store flammable gas and liquid in the appliance.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not touch the compressor or the condenser. They are hot.
- Do not allow food to come in contact with the inner walls of the appliance compartments.

2.4 Internal lighting

⚠ WARNING!
Risk of electric shock.

- This product contains one or more light sources of energy efficiency class F.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

2.5 Care and cleaning

⚠ WARNING!
Risk of injury or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- This appliance contains hydrocarbons in the cooling unit. Only a qualified person must do the maintenance and the recharging of the unit.

2.6 Service

- To repair the appliance contact the Authorised Service Centre. Use only original spare parts.
- Please note that self-repair or non-professional repair can have safety consequences and might void the guarantee.
- The following spare parts are available for at least 7 years after the model has been discontinued: thermostats, temperature sensors, printed circuit boards, light sources, door handles, door hinges, trays and baskets. Door gaskets are available for at least 10 years after the model has been discontinued. The duration may be longer in your country. For further information, please visit our website.
- Please note that some of these spare parts are only available to professional repairers, and that not all spare parts are relevant for all models.

2.7 Disposal

⚠ WARNING!
Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door to prevent children and pets to be closed inside of the appliance.
- The refrigerant circuit and the insulation materials of this appliance are ozone-friendly.
- The insulation foam contains flammable gas. Contact your municipal authority for information on how to discard the appliance correctly.
- Do not cause damage to the part of the cooling unit that is near the heat exchanger.

3. APPLIANCE POSITIONING

3.1 Door reversibility

Refer to the separate document with instructions on installation and door reversal.

3.2 Door alignment


The appliance is equipped with adjustable hinges that allow you to move the door left or right. This adjustment helps you align the door with surrounding cabinets and ensure a symmetrical appearance.

4. CONTROL PANEL

The appliance has a touch display. Use the display to monitor and control all compartments and general settings.

Home screen

Touch display shows the current settings of the appliance. Slide to see more settings.

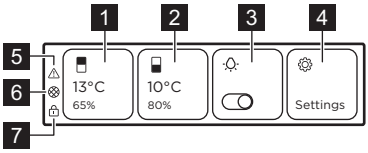

1 Upper zone
The zone shows the set temperature and humidity value. Press + or – to set the temperature in the selected zone (5 – 22 °C). Tap to activate/ deactivate cellar mode.

2 Lower zone
The zone shows the set temperature and humidity value. Press + or – to set the temperature in the selected zone (5 – 22 °C). Tap to activate/ deactivate cellar mode.

3 Light
Tap the slider to turn on/off the light. Tap the light icon to set the colour (cool, neutral, warm) and brightness (0-7) of the light for the door closed and open.

4 Settings
Tap to change the appliance settings (child lock, temperature unit, display brightness, sound, language).

5 Error notification
The icon appears for high and low temperature errors.

6 Filter notification
The icon appears 6 months after the filter reset. Reset the filter by clicking OK. After the reset, the system starts a new cycle until the next filter replacement.

7 Child lock notification

4.1 Cellar Mode

Cellar Mode keeps the temperature and humidity stable. It gives conditions similar to a traditional wine cellar. Use this mode for long-term wine storage.

You can activate Cellar Mode for the upper, middle, or lower compartment.

To activate Cellar Mode:

1. Select the compartment on the Home menu.
2. Turn the Cellar Mode setting on.

3. The display shows Cellar instead of a temperature value.

When Cellar Mode is on, the temperature is automatically set to 12°C. You cannot change the temperature.

To deactivate Cellar Mode, turn off the Cellar Mode setting.

4.2 Door open alarm

If the door remains open for 5 min, the light flashes. After 2 more minutes, an acoustic alarm sounds and a warning message appears on the display. To stop the alarm, close the door or confirm the warning message on the display.

5. DAILY USE

ⓘ Equipment varies by model.


5.1 Push-to-open glass door

To open the appliance:


1. Press the door gently.
2. A piston moves the door to a position that allows you to take hold of the door to open it wider.

During a power outage, the push-to-open mechanism does not work. To open the door, insert your hand between the door and the appliance opposite the hinges.

To close the door, push it gently towards the appliance. Before closing the door wait for the push-to-open mechanism to reset. Closing the door during the reset may damage the mechanism.

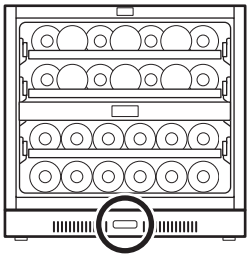

5.2 Wine storage

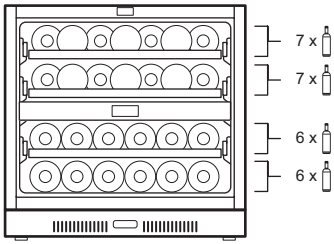

Bottle storage

You can store up to 26 bottles.

Store champagnes, white and sparkling wines with storage temperature between 6°C and 12°C.

Store red wines with storage temperature between 10°C and 18°C.

Storage tips

Evenly distribute bottles in the appliance. Do not cover internal fans. You can remove the top and bottom shelves to increase storage capacity. Do not store bottles on the divider with build-in control panel.

Temperature in the appliance stabilizes 24 hours after changing settings or adding large amount of bottles.


5.3 Removing the shelves

IMPORTANT

Remove the bottles from the appliance and open the door fully before you remove shelves.


Upper shelves

To remove a shelf, pull it out of the rail completely and lift the front.

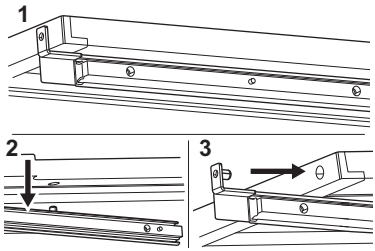

Lower shelf

To remove a shelf, pull it out of the rail completely and lift.

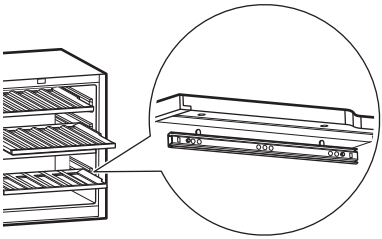


5.4 Replacing the filter

The filter is located in the left upper part of the back of the appliance. Replace it every 6 months.

Remove the old filter:

1. Rotate the filter until its holes are in a vertical position.
2. Pull the filter.

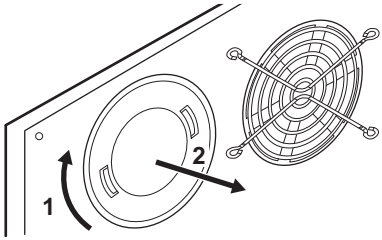

Do the opposite to install the new filter.

6. CARE AND CLEANING

ⓘ Unplug the appliance before carrying out any maintenance operation.

Before first use clean the interior and accessories with lukewarm water and neutral soap, then dry. Clean the equipment and door gaskets regularly.

Clean the control panel with a damp cloth and dry it with a soft cloth. Do not use any detergents.

Clean the defrost water drain hole regularly.

ⓘ Do not wash the accessories and appliance parts in a dishwasher.

7. TROUBLESHOOTING

Appliance does not operate.

- Connect the plug to the mains socket correctly.
- Check if the circuit breaker and fuse are working.

The appliance turns on and off during normal operation.

- Close the door properly.
- Check the door gasket.
- After inserting bottles wait for the temperature to stabilize.

Appliance light is not working.

- Check the light setting. If the light setting is OFF, set it to ON.
- If the light setting is ON, check the brightness settings for the open door and the closed door.

The appliance is noisy or vibrates.

- Level the appliance.

The door does not close properly.

- Level the appliance.
- Level and align the door with the hinges.
- Check that the door is installed correctly after you reverse it.
- Check that the internal parts do not block the door.
- Check the door gasket for dirt and damage.

ⓘ Contact the Authorised Service Centre if the problem persists or to replace the lamp and door gaskets.

8. TECHNICAL DATA

The technical information is on the energy label and on the appliance rating plate, which may be located on or inside the appliance.

The QR code on the energy label supplied with the appliance provides a web link to the information related to the performance of the appliance in the EU EPREL database. Keep the energy label for reference together with the user manual and all other documents provided with this appliance. It is also possible to find the same information in EPREL using the link *https://eprel.ec.europa.eu* and the model name and product number that you find on the rating plate of the appliance. See the link *www.theenergylabel.eu* for detailed information about the energy label.

9. INFORMATION FOR TEST INSTITUTES

Installation and preparation of the appliance for Ecodesign verification must comply with EN 62552 (EU, Switzerland and UK). Refer to Installation for ventilation requirements, recess dimensions, and minimum rear clearances. Contact the Authorised Service Centre for any further information.

10. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol ♺. Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.

1. ÖRYGGISUPPLÝSINGAR..... **10**
2. ÖRYGGISLEIÐBEININGAR..... **11**
3. STAÐSETNING TÆKIS..... **13**
4. STJÓRNBORÐ..... **13**
5. DAGLEG NOTKUN..... **14**
6. UMHIRÐA OG HREINSUN..... **16**
7. BILANALEIT..... **16**
8. TÆKNILEGAR UPPLÝSINGAR..... **16**
9. UPPLÝSINGAR FYRIR PRÓFUNARSTOFNANIR..... **17**
10. UMHVERFISSJÓNARMIÐ..... **17**

1. ⚠ ÖRYGGISUPPLÝSINGAR

Fyrir uppsetningu og notkun heimilistækisins skal lesa meðfylgjandi leiðbeiningar vandlega. Framleiðandinn ber ekki ábyrgð á neinum meiðslum eða skemmdum sem leiða af rangri uppsetningu eða notkun. Geymdu alltaf leiðbeiningarnar á öruggum stað þar sem auðvelt er að nálgast þær til síðari notkunar.

1.1 Öryggi barna og viðkvæmra einstaklinga

- Börn, 8 ára og eldri og fólk með minnkaða líkamlega-, skyn- eða andlega getu, eða sem skortir reynslu og þekkingu, mega nota þetta tæki, ef þau eru undir eftirliti eða hafa verið veittar leiðbeiningar varðandi örugga notkun tækisins og ef þau skilja hættuna sem því fylgir. Börn á aldrinum 3 til 8 ára og einstaklingar með mjög mikla og flókna fötlun er leyfilegt að setja í og taka úr heimilistækinu, að því tilskildu að þau hafi fengið almennilegar leiðbeiningar. Halda ætti börnum yngri en 3 ára frá heimilistækinu nema þau séu undir stöðugu eftirliti.
- Hafa ætti eftirlit með börnum til að tryggja að þau leiki sér ekki með heimilistækið.
- Börn eiga ekki að hreinsa eða framkvæma notandaviðhald á heimilistækinu án eftirlits.
- Haltu öllum umbúðum frá börnum og fargaðu þeim á viðeigandi hátt.

1.2 Almennt öryggi

- Þetta heimilistæki er eingöngu ætlað fyrir geymslu á víni.

- Þetta heimilistæki er hannað til notkunar innanhúss á heimilum.
- Þetta heimilistæki má nota á skrifstofum, í herbergjum hótela, herbergjum gestahúsa, bændagistingum og öðrum sambærilegum gistirýmum þar sem notkun er ekki meiri en almenn heimilisnotkun.
- VIÐVÖRUN: Haltu loftræstingaropum, í afgirðingu heimilistækisins eða í innbyggðu rými, lausu við hindranir.
- VIÐVÖRUN: Notaðu ekki vélrænan búnað eða aðrar aðferðir til að hraða afísunarferli, annan en þann sem framleiðandinn mælir með.
- VIÐVÖRUN: Skemmdu ekki kælimiðilsrásina.
- VIÐVÖRUN: Notaðu ekki rafmagnstæki inni í geymsluhólfum matvæla í heimilistækinu, nema þau séu af þeirri tegund sem framleiðandinn mælir með.
- Notaðu ekki vatnsúða og gufu til að hreinsa heimilistækið.
- Hreinsaðu heimilistækið með mjúkum rökum klút. Notaðu aðeins hlutlaus þvottaefni. Notaðu ekki neinar vörur með svarfefnum, stálull, leysiefni eða málmhluti.
- Þegar heimilistækið er tómt um lengri tíma skal slökkva á því, afísa, hreinsa, þurrka og skilja hurðina eftir opna til að koma í veg fyrir að mygla myndist inni í tækinu.
- Geymdu ekki sprengifim efni eins og úðabrúsa með eldfimu drifefni í þessu heimilistæki.
- Ef rafmagnssnúran er skemmd verður framleiðandi, viðurkennd þjónustumiðstöð, eða svipað hæfur aðili að endurnýja hana til að forðast hættu.

2. ÖRYGGISLEIÐBEININGAR

2.1 Uppsetning

⚠ AÐVÖRUN!

Einungis til þess hæfur aðili má setja upp þetta heimilistæki.

- Fjarlægðu allar umbúðir.
- Ekki setja upp eða nota skemmt heimilistæki.
- Notaðu ekki heimilistækið áður en þú setur upp innbyggða virkið af öryggisástæðum.
- Fylgdu aðskildum leiðbeiningum sem eru á vefsíðu okkar um uppsetningu heimilistækisins.
- Alltaf skal sýna aðgát þegar heimilistækið er fært vegna þess að það er þungt. Notaðu alltaf öryggishanska og lokaðan skóbúnað.

- Gakktu úr skugga um að að loft geti flætt í kringum heimilistækið.
- Við fyrstu uppsetningu skaltu bíða í að minnsta kosti 4 klukkustundir áður en heimilistækið er tengt við rafmagn. Þetta er til að olían nái að flæða aftur í þjöppuna.
- Áður en þú framkvæmir einhverjar aðgerðir á heimilistækinu skaltu taka klóna úr rafmagnsinnstungunni.
- Ekki setja heimilistækið upp nálægt hitagjöfum (ofnum) eða eldavélum, bökunarofnum eða helluborðum, nema annað sé tekið fram í leiðbeiningum um uppsetningu.
- Ekki hafa heimilistækið berskjaldað gagnvart rigningu.
- Ekki setja heimilistækið upp þar sem það verður fyrir beinu sólarljósi.
- Ekki setja þetta heimilistæki upp á svæðum þar sem er of mikill raki eða of kalt.
- Þegar þú færir til heimilistækið, skaltu lyfta brúninni að framan til að koma í veg fyrir að þú rispir gólfið.

2.2 Rafmagnstenging

⚠ AÐVÖRUN!
Hætta á eldi og raflosti.

⚠ AÐVÖRUN!
Þegar heimilistækið er staðsett skaltu tryggja að rafmagnssnúran sé hvorki klemmd né skemmd.

⚠ AÐVÖRUN!
Notaðu ekki fjöltengi eða framlengingarsnúrur.

- Gakktu úr skugga um að færibreyturnar á merkiplötunni séu samhæfar við rafmagnsflokkun aðalæðar aflgjafa.
- Heimilistækið verður að vera jarðtengt.
- Notaðu alltaf rétt uppsettar einangraðar innstungur.
- Ef innstungan á heimilinu er ekki jarðtengd, þarf að jarðtengja heimilistækið í aðskilda jörð til að uppfylla núgildandi reglugerðir. Hafið samband við fagmenntaðan rafvirkja.
- Gakktu úr skugga um að rafmagnsíhlutir verði ekki fyrir skemmdum (t.d. rafmagnsklóin, snúran, þjappan). Hafa skal samband við viðurkennda þjónustumiðstöð eða rafvirkja til að skipta um rafmagnsíhluti.
- Rafmagnssnúran verður að liggja neðar en rafmagnsklóin.
- Aðeins skal tengja rafmagnsklóna við rafmagnsinnstunguna í lok uppsetningarferlisins. Gakktu úr skugga um að rafmagnsklóin sé aðgengileg eftir uppsetningu.
- Ekki aftengja tækið með því að toga í rafmagnssnúruna. Taktu alltaf í innstunguna sjálfa.

2.3 Notkun

⚠ AÐVÖRUN!
Hætta á meiðslum, bruna, raflosti eða eldsvoða.


Heimilistækið inniheldur eldfimt gas, ísóbútan (R600a), náttúrulegt gas, sem er mjög umhverfisvænt. Gættu þess að valda ekki skaða á kælirásinni sem inniheldur ísóbútan.

- Breytið ekki eiginleikum heimilistækisins.
- Það er harðbannað að nota þessa innbyggðu vöru sem frístandandi tæki.
- Þetta heimilistæki er ætlað til notkunar við stofuhita á bilinu frá 16°C til 38°C. Þetta tilgreinda hitastigssvið tryggir rétta virkni heimilistækisins.
- Ekki láta rafmagnstæki (s.s. ísgerðarvélar) í tækið nema það sé tekið fram af framleiðanda að þau þoli það.
- Ef rafrásir kælibúnaðarins skemmast skal gæta þess að það sé enginn logi eða kveikjugjafar í herberginu. Loftræstu herbergið.
- Ekki láta heita hluti snerta þá hluta heimilistækisins sem eru úr plasti.
- Ekki nota heimilistækið til að geyma eldfimar lofttegundir eða vökva.
- Setjið ekki eldfim efni eða hluti bleytta með eldfimum efnum í, nálægt, eða á heimilistækið.
- Ekki snerta þjöppuna eða þéttinn. Þau eru heit.
- Leyfið ekki matvælum að komast í snertingu við innri veggi heimilistækishólfanna.

2.4 Innri lýsing

⚠ AÐVÖRUN!
Hætta á raflosti.

- Þessi vara inniheldur einn eða fleiri ljósgjafa í orkunýtniflokknum F.

- Varðandi ljós inni í þessari vöru og varaljós sem eru seld sér: Þessum ljósum er ætlað að þola öfgafullar aðstæður í heimilistækjum á borð við hitastig, titring, raka eða er ætlað að senda upplýsingar um notkunarástand tækisins. Þau eru ekki ætluð til að nota í öðrum tækjum og henta ekki sem lýsing í herbergjum heimila.

2.5 Umhirða og hreinsun

⚠ AÐVÖRUN!

Hætta á meiðslum eða skemmdum á heimilistækinu.

- Áður en viðhald fer fram skal slökkva á heimilistækinu og aftengja rafmagnsklóna frá rafmagnsinnstungunni.
- Þetta heimilistæki inniheldur vetniskolefni í kælibúnaðinum. Einungis hæfur aðili má sinna viðhaldi og endurhleðslu þessa tækis.

2.6 Þjónusta

- Hafðu samband við viðurkennda þjónustumiðstöð til að gera við heimilistækið. Nota skal eingöngu upprunalega varahluti.
- Vinsamlegast athugaðu að ef þú eða einhver sem ekki er fagmaður gerir við getur það haft afleiðingar varðandi öryggi og gæti ógilt ábyrgðina.
- Eftirfarandi varahlutir eru fáanlegir í að minnsta kosti 7 ár eftir að framleiðslu gerðarinnar hefur verið hætt: hitastillar, hitaskynjarar, prentplötur, ljósgjafar, hurðahandföng, hurðalamir, bakkar og grindur. Hurðaþéttingar eru fáanlegar í að minnsta kosti 10 ár eftir að framleiðslu gerðarinnar hefur verið hætt. Verið gæti að tímalengdin sé ekki lengur fáanleg í þínu landi. Farðu á vefsíðu okkar fyrir frekari upplýsingar.
- Vinsamlegast athugaðu að suma þessara varahluta geta aðeins atvinnuviðgerðaraðilar fengið og ekki eru allir varahlutir viðeigandi fyrir allar gerðir.

2.7 Förgun

⚠ AÐVÖRUN!

Hætta á meiðslum eða köfnun.

- Aftengið heimilistækið frá rafmagnsgjafanum.
- Klippa rafmagnssnúruna af og fleygið henni.
- Fjarlægið hurðina til að koma í veg fyrir að börn eða dýr geti lokast inni í tækinu.
- Kælirásin og einangrunarefnið á tækinu eru ósónvæn.
- Einangrunarfroðan inniheldur eldfimar lofttegundir. Hafið samband við sveitarfélagið til að fá upplýsingar um hvernig á að farga heimilistækinu á réttan hátt.
- Ekki valda skaða á hluta kælieiningarinnar sem er nálægt hitaskiptinum.

3. STAÐSETNING TÆKIS

3.1 Viðsnúningur hurðar

Vinsamlegast vísaðu í sérskjal með leiðbeiningum um uppsetningu og viðsnúning hurðar.

3.2 Hurðajöfnun


Stillanlegar lamir gera þér kleift að færa hurðina til vinstri eða hægri. Með þessari stillingu geturðu fært hurðina þannig að hún passi við skápana og tryggi samhverft útlit.

4. STJÓRNBORÐ

Það er snertiskjár á heimilistækinu. Notaðu skjáinn til að fylgjast með og stýra öllum hólfum sem og almennum stillingum.

Heimaskjár

Sýnir núverandi stillingar heimilistækisins. Skrunaðu til að sjá fleiri stillingar.

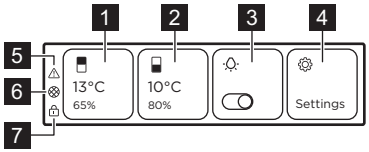

1 **Efra svæði**
Svæðið sýnir hitastigið og rakastigsgildin. Ýttu á + eða – til að stilla hitastigið á völdu svæði (5 – 22 °C). Ýttu á til að virkja eða afvirkja kjallarahaminn.

2 **Neðra svæði**
Svæðið sýnir hitastigið og rakastigsgildin. Ýttu á + eða – til að stilla hitastigið á völdu svæði (5 – 22 °C). Ýttu á til að virkja eða afvirkja kjallarahaminn.

3 **Létt**
Ýttu á sleðann til að kveikja eða slökkva ljósinu. Ýttu á ljósatáknið til að velja lit (kaldan, hlutlausan, hlýjan) og birtustig (0-7) ljóssins með opna og lokaða hurð.

4 **Stillingar**
Ýttu til að breyta stillingunum á heimilistækinu (barnalás, hitastigseining, skjábirta, hljóð, tungumál).

5 **Villu tilkynning**
Táknið birtist vegna villna sem orsakast af of háu eða of lágu hitastigi.

6 **Síu tilkynning**
Táknið birtist 6 mánuðum eftir að sían er endurstillt. Endurstilltu síuna með því að smella á OK. Kerfið nýja lotu eftir endurstillinguna sem endist fram að næstu síuskiptum.

7 **Barnalæsingar tilkynning**

4.1 Kjallarahamur

Kjallarahamur heldur bæði hita- og rakastiginu stöðugu. Hann býr til aðstæður sem líkja eftir hefðbundnum vínkjallara. Notaðu þennan ham fyrir langtíma geymslu á víni.

Þú getur virkt kjallarahaminn í efsta-, mið-, eða neðsta hólfinu.

Kjallarahamur virkjaður:

1. Veldu hólfið á aðalvalmyndinni.
2. Kveiktu á kjallarastillingunni.
3. Skjárinn sýnir „Kjallari“ í stað gildisins fyrir hitastig.

Þegar kjallarahamurinn er í gangi fer hitastigið sjálfkrafa á 12°C. Þú getur ekki breytt hitastiginu.

Til að afvirkja kjallarahaminn skaltu slökkva á kjallarastillingunum.

4.2 Aðvörun fyrir opna hurð

Ef hurðin er opin í 5 mín, blikkar ljósið. Eftir 2 mínútur í viðbót heyrist hljóðmerki og viðvörunarskilaboð birtast á skjánum. Til að stöðva viðvörunina skaltu loka hurðinni eða staðfesta viðvörunarskilaboðin á skjánum.

5. DAGLEG NOTKUN

ⓘ Búnaðurinn er mismunandi eftir tegund.


5.1 Ýta-og-opna glerhurð

Til að opna heimilistækið:


1. Ýttu varlega á hurðina.
2. Opnunarbúnaður færir hurðina í stöðu sem gerir þér kleift að taka í hana og opna hana meira.

Þegar rafmagn fer af virkar „ýta-til-að-opna búnaðinn“ eiginleikinn ekki. Til að opna hurðina skaltu setja höndina milli hurðarinnar og tækisins hinum megin við lamirnar.

Til að loka hurðinni skaltu ýta henni varlega að tækinu. Áður en þú lokar hurðinni skaltu bíða eftir að „ýta-til-að-opna búnaðurinn“ endurstillist. Ef hurðinni er lokað meðan á endurstillingu stendur getur það skemmt búnaðinn.

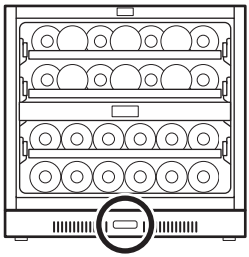

5.2 Víngeymsla

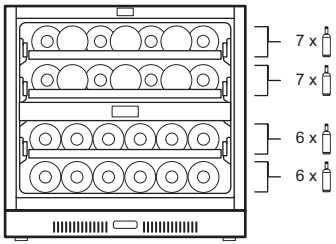

Geymsla fyrir flöskur

Þú getur geymt allt að 26 flöskur.

Geymdu kampavín, hvítvín og freyðivín við geymsluhitastig á milli 6°C og 12°C.

Geymdu rauðvín við geymsluhitastig á bilinu 10°C og 18°C.

Geymsluábendingar

Raðaðu flöskunum jafnt í heimilistækið. Ekki hylja innri vifturnar. Þú getur fjarlægt efstu og neðstu hilluna til að auka geymslurýmið. Ekki geyma flöskur á skilrúminu með innbyggða stjórntækinu.

Hitastigið í tækinu verður stöðugt eftir um 24 klukkustundir þegar stillingum er breytt eða mikið af flöskum eru settar inn í einu.


5.3 Að fjarlægja hillurnar

ÁRÍÐANDI

Fjarlægðu flöskurnar úr heimilistækinu áður en þú tekur hillur út eða setur þær inn.


Efri hurðarhillur

Til að fjarlægja hilluna, dragðu hana alveg út úr brautinni og lyftu framendanum.

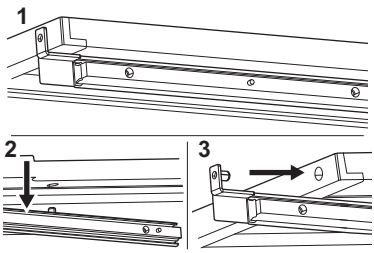

Lægri hurðarhillur

Til að fjarlægja hilluna, dragðu hana alveg út úr brautinni og lyftu framendanum.

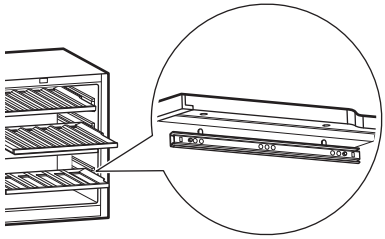


5.4 Skipta um síuna

Sía er staðsett aftan á tækinu, efst til vinstri. Skiptu um hana á 6 mánaða fresti.

Fjarlægðu gömlu síuna:

1. Snúðu síunni þar til götin eru í lóðréttri stöðu.
2. Dragðu síuna út.

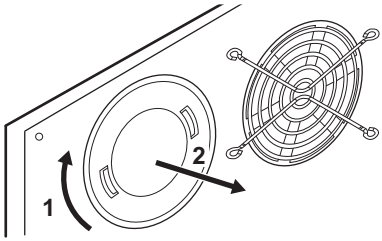

Gerðu hið gagnstæða til að setja nýju síuna upp.

6. UMHIRÐA OG HREINSUN

ⓘ Taktu heimilistækið úr sambandi áður en nokkurs konar viðhald fer fram.

Fyrir fyrstu notkun skal hreinsa innanvert rýmið og alla fylgihluti með volgu vatni og hlutlausri sápu og þurrka síðan. Hreinsaðu búnaðinn og hurðarþéttingar reglulega.

Hreinsaðu stjórnborðið með rökum klút og þurrkaðu það með mjúkum klút. Ekki nota neitt þvottaefni.

Gættu þess að hreinsa afrennslisop afþíðingarvatns með reglulegu millibili.

ⓘ Ekki þvo fylgihluti eða hluta tækisins í uppþvottavél.

7. BILANALEIT

Heimilistækið virkar ekki.

- Settu rafmagnsklóna rétt í innstunguna.
- Athugaðu hvort straumrofinn og öryggið virki.

Tækið kveikir og slekkur á sér við eðlilega notkun.

- Lokaðu hurðinni þéttingsfast.
- Athugaðu þéttiborða í hurð.
- Eftir að þú setur flöskurnar inn skaltu bíða þar til hitastigið hefur náð stöðugleika.

Lýsing tækisins virkar ekki.

- Athugaðu ljósastillinguna. Ef ljósastillingin er SLÖKKT, stilltu hana á KVEIKT.
- Ef ljósastillingin er KVEIKT, athugaðu birtustillingar fyrir opna hurð og lokaða hurð.

Heimilistækið er hávaðasamt eða titrar.

- Stilltu tækið í lárétta stöðu.

Hurð heimilistækisins lokast ekki almennilega.

- Stilltu tækið í lárétta stöðu.
- Jafnaðu og stilltu hurðina með lömunum.
- Athugaðu að hurðin sé rétt uppsett eftir að þú snýrð henni við.
- Athugaðu að innri hlutir hindri ekki hurðina.
- Athugaðu gúmmíkantinn á hurðinni, hvort hann sé skítugur eða skemmdur.

ⓘ Hafðu samband við viðurkennda þjónustumiðstöð ef vandamálið heldur áfram eða til að skipta um peru og hurðarþéttingar.

8. TÆKNILEGAR UPPLÝSINGAR

Tæknilegar upplýsingar eru á orkumerkingu og á merkiplötu tækisins, sem getur verið staðsett á tækinu eða inni í því.

QR-kóðinn á orkumerkingunni sem fylgir þessu tæki, gefur upp tengil á vefsíðu varðandi upplýsingar um frammistöðu tækisins í gagnagrunni EU EPREL. Geymdu orkumerkimiðann til uppflettingar ásamt notandahandbókinni og öllum öðrum skjölum sem fylgja með þessu heimilistæki. Það er einnig mögulegt að nálgast sömu upplýsingar í EPREL með því að nota tengilinn: *https://eprel.ec.europa.eu* og gerðarheiti og framleiðslunúmer sem finna má á merkiplötu heimilistækisins. Sjá tengilinn: *www.theenergylabel.eu* varðandi ítarlegar upplýsingar um orkumerkingar.

9. UPPLÝSINGAR FYRIR PRÓFUNARSTOFNANIR

Uppsetning og undirbúningur heimilistækisins fyrir vistvæna vottun verður að samræmast EN 62552 (ESB, Sviss og Bretland). Skoðaðu kaflann Uppsetning um loftræstingarkröfur, innfellingarmál, og lágmarksbil að aftan. Hafðu samband við viðurkennda þjónustuaðila til að fá frekari upplýsingar.

10. UMHVERFISSJÓNARMIÐ

Settu efni með tákninu í endurvinnslu ♺. Settu umbúðirnar í viðeigandi ílát til endurvinnslu. Verndið umhverfið og heilbrigði manna með því að endurvinna raf- og rafeindabúnaðarúrgang heimilistækja. Fargaðu ekki heimilistækjum sem merkt eru með tákninu með heimilisúrgangi. Skilið vörunni á staðbundna endurvinnslustöð eða hafið samband við staðaryfirvöld.



CE

212003757-B-202026