

AEG


aeg.com/register

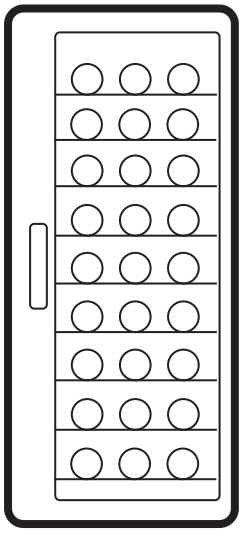

AWCD280B6B

INSTALLATION

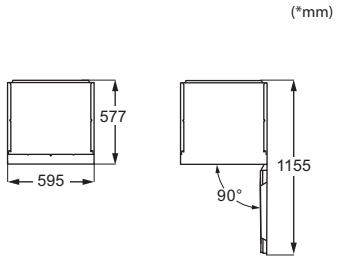

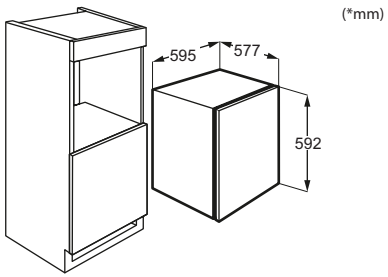

NOISES



1. SAFETY INFORMATION..... **2**
2. SAFETY INSTRUCTIONS..... **4**
3. APPLIANCE POSITIONING..... **6**
4. CONTROL PANEL..... **6**
5. DAILY USE..... **7**
6. CARE AND CLEANING..... **8**
7. TROUBLESHOOTING..... **8**
8. TECHNICAL DATA..... **8**
9. INFORMATION FOR TEST INSTITUTES **9**
10. ENVIRONMENTAL CONCERNS..... **9**

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance read the supplied instructions carefully. The manufacturer is not responsible for any injuries or damage that result from incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical,

sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children aged from 3 to 8 years and persons with very extensive and complex disabilities are allowed to load and unload the appliance provided that they have been properly instructed. Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.

- Children should be supervised to ensure that they do not play with the appliance.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.
- Keep all packaging away from children and dispose of it appropriately.

1.2 General Safety

- This appliance is for storing wine only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in, offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: Do not damage the refrigerant circuit.
- WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

- When the appliance is empty for long period, switch it off, defrost, clean, dry and leave the door open to prevent mould from developing within the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.

2. SAFETY INSTRUCTIONS

2.1 Installation

⚠ WARNING!
Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Do not use the appliance before installing it in the built-in structure due to safety manner.
- Follow the separate instructions for the appliance installation available on our website.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Make sure the air can circulate around the appliance.
- At first installation, wait at least 4 hours before connecting the appliance to the power supply. This is to allow the oil to flow back in the compressor.
- Before carrying out any operations on the appliance, remove the plug from the power socket.
- Do not install the appliance close to radiators or cookers, ovens, or hobs, unless otherwise specified in the installation instructions.
- Do not expose the appliance to the rain.
- Do not install the appliance where there is direct sunlight.
- Do not install this appliance in areas that are too humid or too cold.
- When you move the appliance, lift it by the front edge to avoid scratching the floor.

2.2 Electrical connection

⚠ WARNING!
Risk of fire and electric shock.

⚠ WARNING!
When positioning the appliance, ensure the supply cord is not trapped or damaged.

⚠ WARNING!
Do not use multi-plug adapters and extension cables.

- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- The appliance must be earthed.
- Always use a correctly installed shockproof socket.
- If the domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician.
- Make sure not to cause damage to the electrical components (e.g. mains plug, mains cable, compressor). Contact the Authorised Service Centre or an electrician to change the electrical components.
- The mains cable must stay below the level of the mains plug.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.

- Do not disconnect the appliance by pulling on the mains cable. Always pull on the mains plug.

2.3 Use

⚠ WARNING!
Risk of injury, burns, electric shock or fire.

 The appliance contains flammable gas, isobutane (R600a), a natural gas with a high level of environmental compatibility. Be careful not to cause damage to the refrigerant circuit containing isobutane.

- Do not change the specification of the appliance.
- Any use of the built-in product as free-standing is strictly prohibited.
- This appliance is intended to be used at ambient temperature ranging from 16°C to 38°C. The specified temperature range guarantees the correct operations of the appliance.
- Do not put electrical appliances (e.g. ice cream makers) in the appliance unless they are stated applicable by the manufacturer.
- If damage occurs to the refrigerant circuit, make sure that there are no flames and sources of ignition in the room. Ventilate the room.
- Do not let hot items to touch the plastic parts of the appliance.
- Do not store flammable gas and liquid in the appliance.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not touch the compressor or the condenser. They are hot.
- Do not allow food to come in contact with the inner walls of the appliance compartments.

2.4 Internal lighting

⚠ WARNING!
Risk of electric shock.

- This product contains one or more light sources of energy efficiency class F.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

2.5 Care and cleaning

⚠ WARNING!
Risk of injury or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- This appliance contains hydrocarbons in the cooling unit. Only a qualified person must do the maintenance and the recharging of the unit.

2.6 Service

- To repair the appliance contact the Authorised Service Centre. Use only original spare parts.
- Please note that self-repair or non-professional repair can have safety consequences and might void the guarantee.
- The following spare parts are available for at least 7 years after the model has been discontinued: thermostats, temperature sensors, printed circuit boards, light sources, door handles, door hinges, trays and baskets. Door gaskets are available for at least 10 years after the model has been discontinued. The duration may be longer in your country. For further information, please visit our website.
- Please note that some of these spare parts are only available to professional repairers, and that not all spare parts are relevant for all models.

2.7 Disposal

⚠ WARNING!
Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door to prevent children and pets to be closed inside of the appliance.
- The refrigerant circuit and the insulation materials of this appliance are ozone-friendly.
- The insulation foam contains flammable gas. Contact your municipal authority for information on how to discard the appliance correctly.

- Do not cause damage to the part of the cooling unit that is near the heat exchanger.

3. APPLIANCE POSITIONING

3.1 Door reversibility

Refer to the separate document with instructions on installation and door reversal.

3.2 Door alignment


The appliance is equipped with adjustable hinges that allow you to move the door left or right. This adjustment helps you align the door with surrounding cabinets and ensure a symmetrical appearance.

4. CONTROL PANEL

The appliance has a touch display. Use the display to monitor and control all compartments and general settings.

Home screen

Touch display shows the current settings of the appliance. Slide to see more settings.

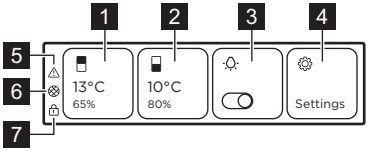

1 **Upper zone**
The zone shows the set temperature and humidity value. Press + or – to set the temperature in the selected zone (5 – 22 °C). Tap to activate/ deactivate cellar mode.

2 **Lower zone**
The zone shows the set temperature and humidity value. Press + or – to set the temperature in the selected zone (5 – 22 °C). Tap to activate/ deactivate cellar mode.

3 **Light**
Tap the slider to turn on/off the light. Tap the light icon to set the colour (cool, neutral, warm) and brightness (0-7) of the light for the door closed and open.

4 **Settings**
Tap to change the appliance settings (child lock, temperature unit, display brightness, sound, language).

5 **Error notification**
The icon appears for high and low temperature errors.

6 **Filter notification**
The icon appears 6 months after the filter reset. Reset the filter by clicking OK. After the reset, the system starts a new cycle until the next filter replacement.

7 **Child lock notification**

4.1 Cellar Mode

Cellar Mode keeps the temperature and humidity stable. It gives conditions similar to a traditional wine cellar. Use this mode for long-term wine storage.

You can activate Cellar Mode for the upper, middle, or lower compartment.

To activate Cellar Mode:

1. Select the compartment on the Home menu.
2. Turn the Cellar Mode setting on.
3. The display shows Cellar instead of a temperature value.

When Cellar Mode is on, the temperature is automatically set to 12°C. You cannot change the temperature.

To deactivate Cellar Mode, turn off the Cellar Mode setting.

4.2 Door open alarm

If the door remains open for 5 min, the light flashes. After 2 more minutes, an acoustic alarm sounds and a warning message appears on the display. To stop the alarm, close the door or confirm the warning message on the display.

5. DAILY USE

ⓘ Equipment varies by model.


5.1 Push-to-open glass door

To open the appliance:


1. Press the door gently.
2. A piston moves the door to a position that allows you to take hold of the door to open it wider.

During a power outage, the push-to-open mechanism does not work. To open the door, insert your hand between the door and the appliance opposite the hinges.

To close the door, push it gently towards the appliance. Before closing the door wait for the push-to-open mechanism to reset. Closing the door during the reset may damage the mechanism.

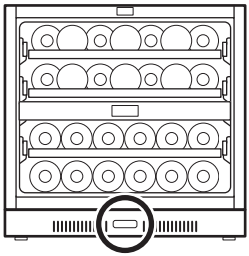

5.2 Wine storage

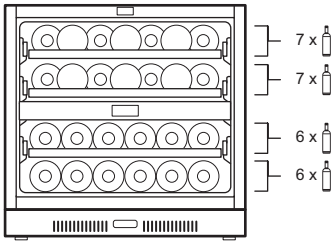

Bottle storage

You can store up to 26 bottles.

Store champagnes, white and sparkling wines with storage temperature between 6°C and 12°C.

Store red wines with storage temperature between 10°C and 18°C.

Storage tips

Evenly distribute bottles in the appliance. Do not cover internal fans. You can remove the top and bottom shelves to increase storage capacity. Do not store bottles on the divider with build-in control panel.

Temperature in the appliance stabilizes 24 hours after changing settings or adding large amount of bottles.


5.3 Removing the shelves

IMPORTANT

Remove the bottles from the appliance and open the door fully before you remove shelves.


Upper shelves

To remove a shelf, pull it out of the rail completely and lift the front.

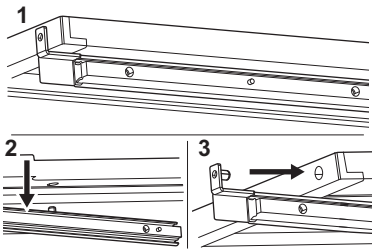

Lower shelf

To remove a shelf, pull it out of the rail completely and lift.

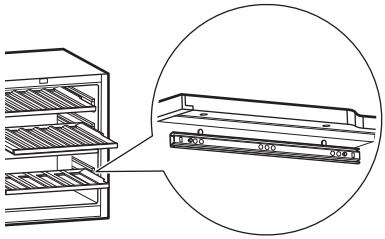


5.4 Replacing the filter

The filter is located in the left upper part of the back of the appliance. Replace it every 6 months.

Remove the old filter:

1. Rotate the filter until its holes are in a vertical position.
2. Pull the filter.

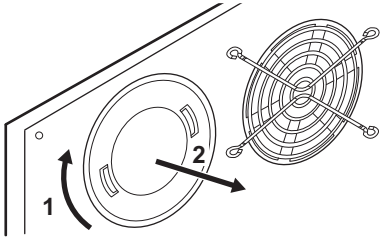

Do the opposite to install the new filter.

6. CARE AND CLEANING

ⓘ Unplug the appliance before carrying out any maintenance operation.

Before first use clean the interior and accessories with lukewarm water and neutral soap, then dry. Clean the equipment and door gaskets regularly.

Clean the control panel with a damp cloth and dry it with a soft cloth. Do not use any detergents.

Clean the defrost water drain hole regularly.

ⓘ Do not wash the accessories and appliance parts in a dishwasher.

7. TROUBLESHOOTING

Appliance does not operate.

- Connect the plug to the mains socket correctly.
- Check if the circuit breaker and fuse are working.

The appliance turns on and off during normal operation.

- Close the door properly.
- Check the door gasket.
- After inserting bottles wait for the temperature to stabilize.

Appliance light is not working.

- Check the light setting. If the light setting is OFF, set it to ON.
- If the light setting is ON, check the brightness settings for the open door and the closed door.

The appliance is noisy or vibrates.

- Level the appliance.

The door does not close properly.

- Level the appliance.
- Level and align the door with the hinges.
- Check that the door is installed correctly after you reverse it.
- Check that the internal parts do not block the door.
- Check the door gasket for dirt and damage.

ⓘ Contact the Authorised Service Centre if the problem persists or to replace the lamp and door gaskets.

8. TECHNICAL DATA

The technical information is on the energy label and on the appliance rating plate, which may be located on or inside the appliance.

The QR code on the energy label supplied with the appliance provides a web link to the information related to the performance of the appliance in the EU EPREL database. Keep the energy label for reference together with the user manual and all other documents provided with this appliance. It is also possible to find the same information in EPREL using the link *https://eprel.ec.europa.eu* and the model name and product number that you find on the rating plate of the appliance. See the link

www.theenergylabel.eu for detailed information about the energy label.

9. INFORMATION FOR TEST INSTITUTES

Installation and preparation of the appliance for Ecodesign verification must comply with EN 62552 (EU, Switzerland and UK). Refer to Installation for ventilation requirements, recess dimensions, and minimum rear clearances. Contact the Authorised Service Centre for any further information.

10. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.



212003758-B-202026